

## Read Diagnostic Trouble Code (DTC)

POWER SEAT MEMORY SYSTEM (DIAGNOSTICS)

---

### 7. Read Diagnostic Trouble Code (DTC)

#### A: OPERATION

- For operation procedures, refer to the “PC application help for Subaru Select Monitor”.
- For details concerning DTC, refer to the List of Diagnostic Trouble Codes (DTC).

#### NOTE:

Select a diagnostic code for the seat memory from {Diagnostic Code(s) Display} in “Integ. unit mode”.