

Clear Memory Mode

POWER SEAT MEMORY SYSTEM (DIAGNOSTICS)

8. Clear Memory Mode

A: OPERATION

For operation procedures, refer to the “PC application help for Subaru Select Monitor”.

NOTE:

Select a diagnostic code for the seat memory from {Clear Memory} in “Integ. unit mode”.