## **List of Diagnostic Trouble Code (DTC)**

## 9. List of Diagnostic Trouble Code (DTC)

## A: LIST

DTC	Item	Content of diagnosis	Reference
B1630	LIN Communication Error	Malfunction of LIN communication is detected.	<ref. b1630="" commu-<br="" dtc="" lin="" psm(diag)-14,="" to="">NICATION ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
B1631	LIN Bus Short Circuit	Malfunction of LIN communication is detected.	<ref. (dtc).="" ,="" b1631="" bus="" circuit="" code="" diagnostic="" dtc="" lin="" procedure="" psm(diag)-15,="" short="" to="" trouble="" with=""></ref.>
B1632	Vehicle Speed Is Abnormal	Malfunction of vehicle speed signal is detected.	<ref. b1632="" dtc="" psm(diag)-16,="" to="" vehicle<br="">SPEED IS ABNORMAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>
B1633	EPB Abnormal	Malfunction of data from electronic parking brake control module is detected.	<ref. (dtc).="" abnor-mal,="" b1633="" code="" diagnostic="" dtc="" epb="" procedure="" psm(diag)-17,="" to="" trouble="" with=""></ref.>
B1634	EEPROM Failure	Malfunction of EEPROM is detected.	<ref. (dtc).="" b1634="" code="" diagnostic="" dtc="" eeprom="" fail-ure,="" procedure="" psm(diag)-18,="" to="" trouble="" with=""></ref.>
B1635	Power Supply Voltage Failure	Low battery voltage is detected.	<ref. b1635="" dtc="" power="" psm(diag)-19,="" sup-<br="" to="">PLY VOLTAGE FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</ref.>