

## 14.Rear Gate Opener Button

### A: REMOVAL


NOTE:

The rear gate opener button is integrated into the license plate light assembly harness.


1) Remove the rear gate garnish. <Ref. to EI-171, REMOVAL, Rear Gate Garnish.>

2) Remove the rear gate opener button.

(1) Release the locks at both ends of the rear gate opener button by pushing with a flat tip screwdriver.

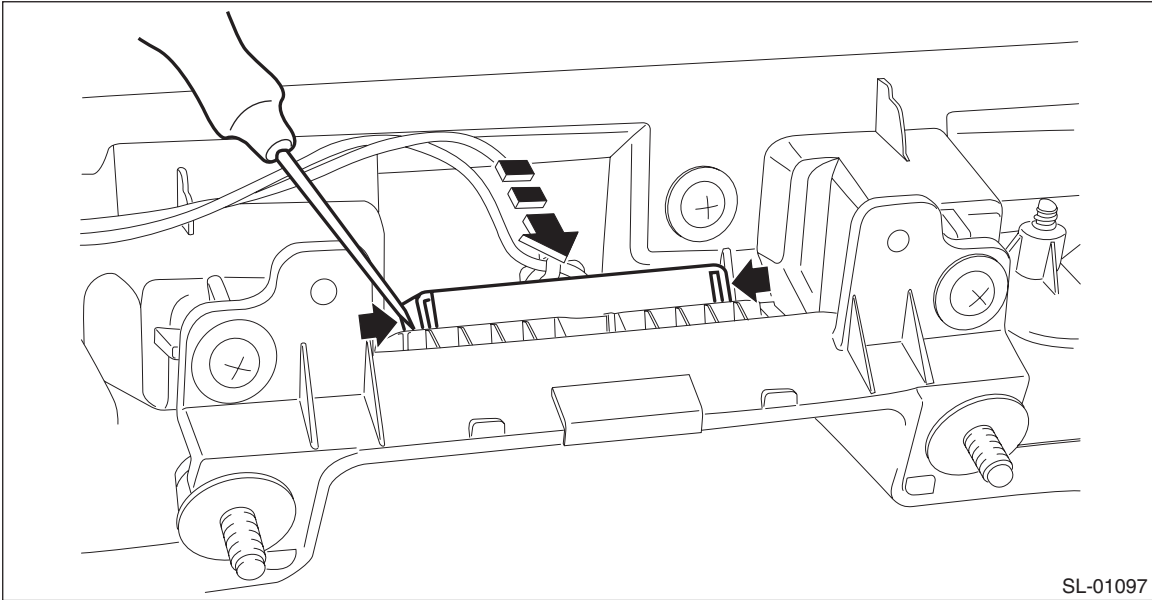


(2) Remove the screws and remove the rear lock button (lock). (model with keyless access)

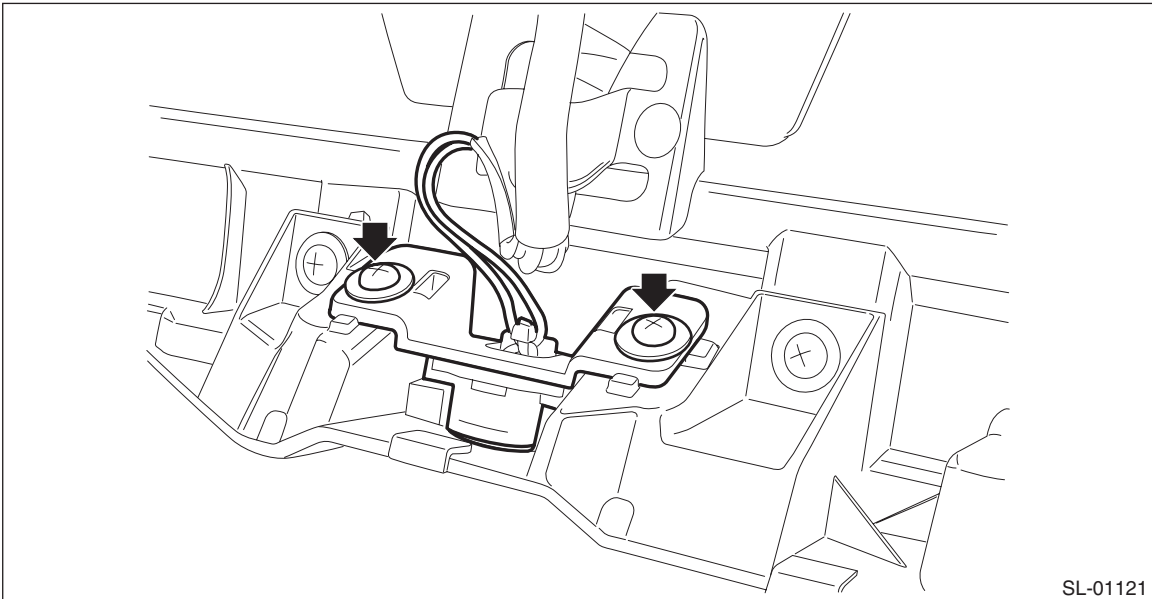

# Rear Gate Opener Button


## SECURITY AND LOCKS

- (3) Disconnect the rear exterior antenna connector. (model with keyless access)

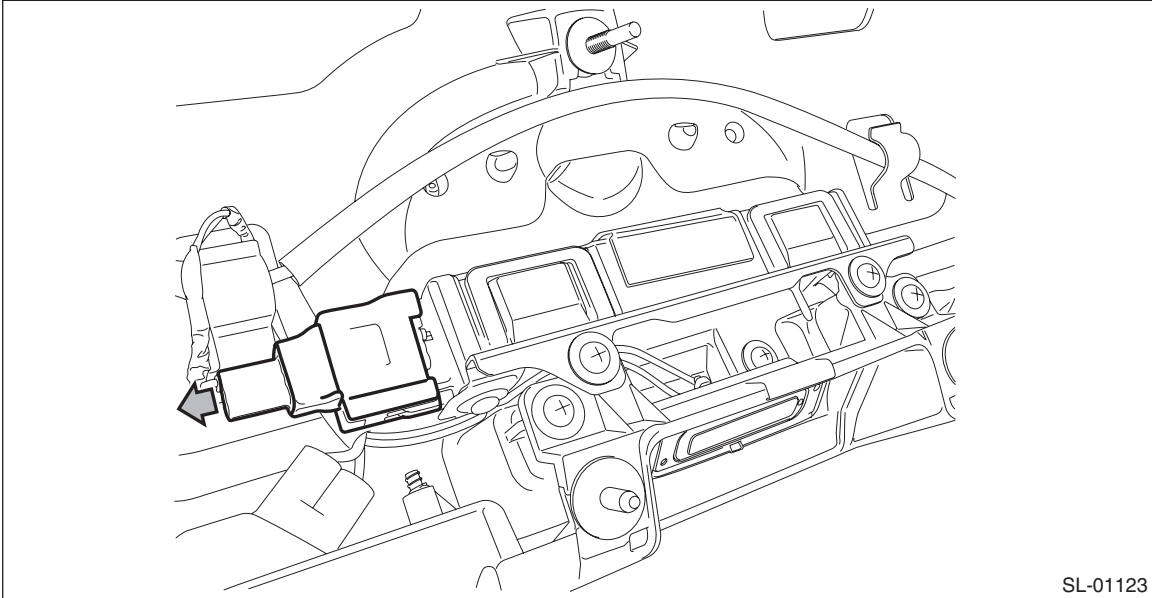


SL-01123

- (4) Remove the screws and remove the license plate light.

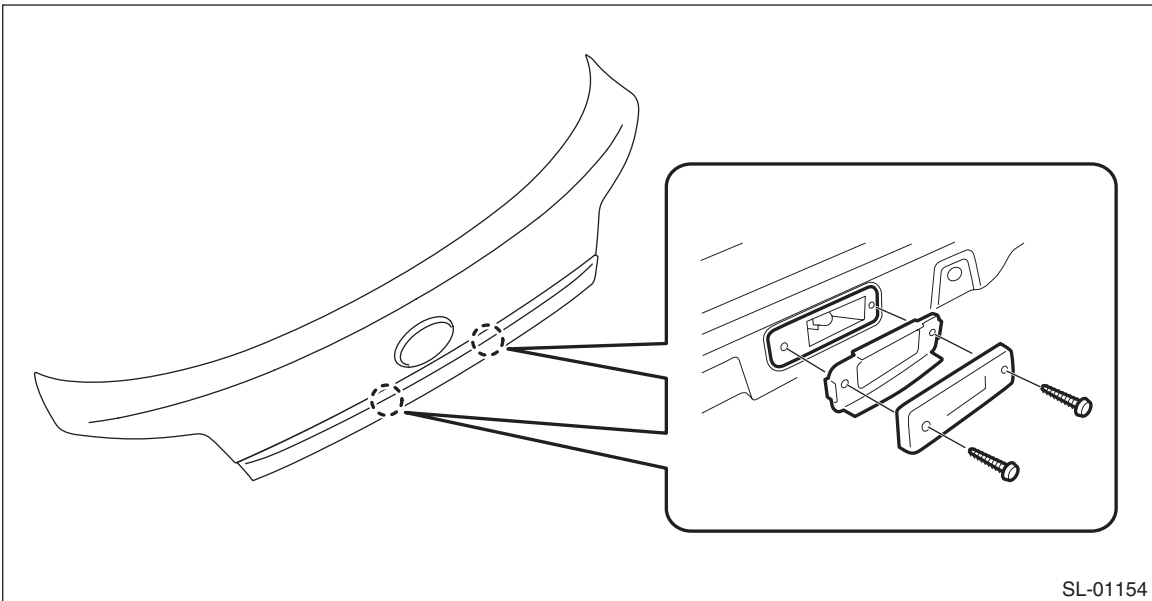

SL-01154

(5) Remove the license plate light assembly harness from the rear gate garnish.

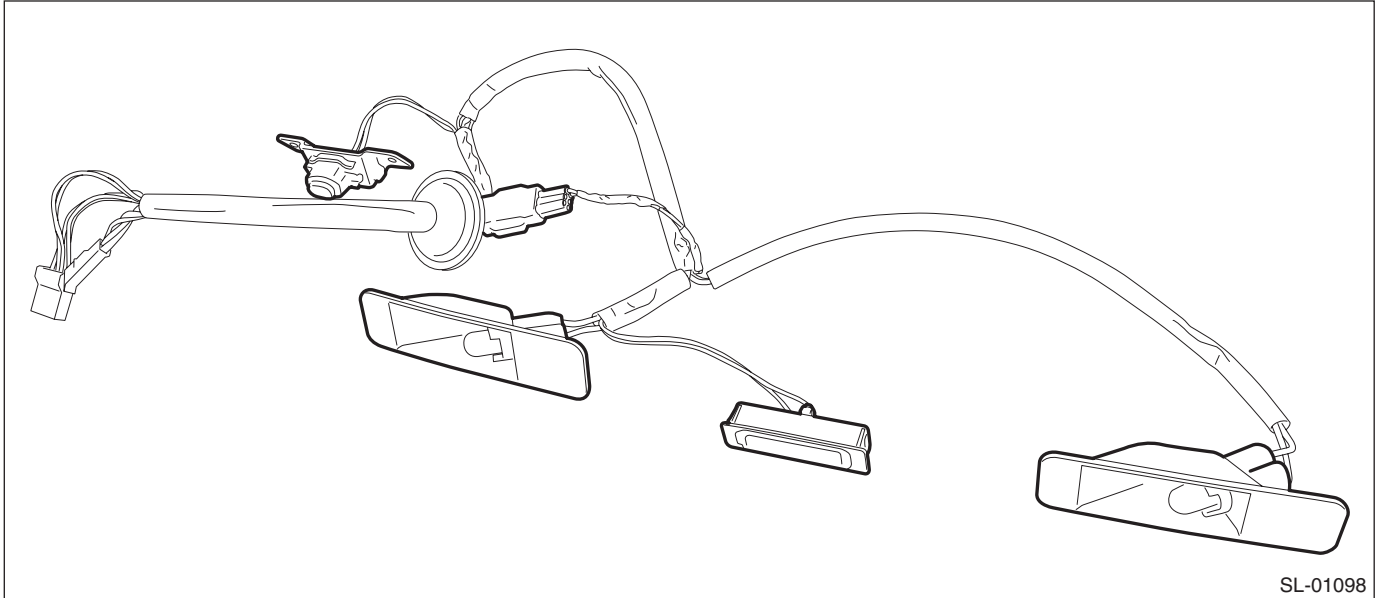

SL-01098

## B: INSTALLATION

### CAUTION:

**Make sure that the harness grommet is installed securely. Incomplete installation causes water leak.**


Install each part in the reverse order of removal.

## C: INSPECTION

- 1) Disconnect the rear gate opener button connector.
- 2) Measure the resistance between rear gate opener button terminals.

### Preparation tool:

**Circuit tester**

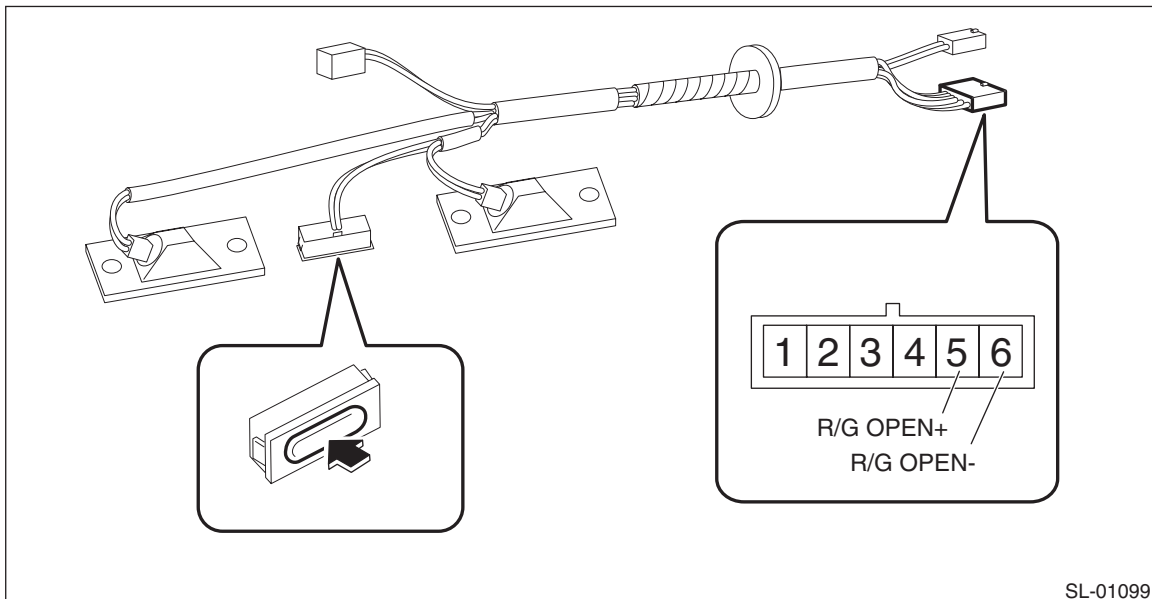

SL-01099

Terminal No.	Inspection conditions	Standard
5 — 6	Open	Less than 1 Ω
	Close	1 MΩ or more

3) Replace the rear gate opener button if the inspection result is not within the standard value.