

## 29. Immobilizer Control Module

### A: NOTE

NOTE:

Except for models with keyless access.

The control of immobilizer system is carried out in body integrated unit. For operation procedures, refer to "Body Integrated Unit".

- Removal: <Ref. to SL-80, REMOVAL, Body Integrated Unit.>
- Installation: <Ref. to SL-80, INSTALLATION, Body Integrated Unit.>