

33.Front Lock Button


A: REMOVAL

CAUTION:

Front lock button is integrated into the keyless access front exterior antenna.

Do not detach the antenna from the front door outer handle.

If replacement is required, replace the front outer handle assembly as a whole.

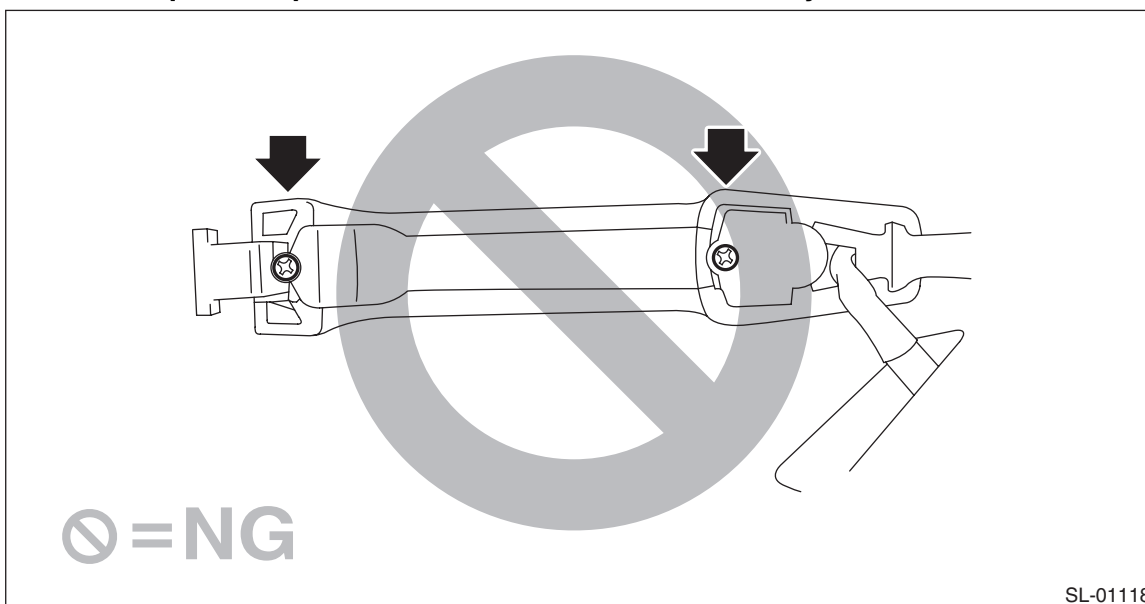

Remove the front outer handle assembly. <Ref. to SL-37, REMOVAL, Front Outer Handle.>

B: INSPECTION

- 1) Display the current data using the Subaru Select Monitor.
- 2) Check if the display changes when the front lock button is operated.
- 3) If the display is not correct as the result of inspection, refer to "General Diagnostic Table" of the "KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)" section. <Ref. to KPS(diag)-86, KEYLESS ACCESS SYSTEM, INSPECTION, General Diagnostic Table.>