


36.Receiver

A: REMOVAL

NOTE:

Except for model with keyless entry

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear quarter trim LH. <Ref. to EI-115, OUTBACK MODEL, REMOVAL, Rear Quarter Trim.>
- 3) Remove the receiver.
 - (1) Disconnect the connector.
 - (2) Remove the bolt and remove the receiver.

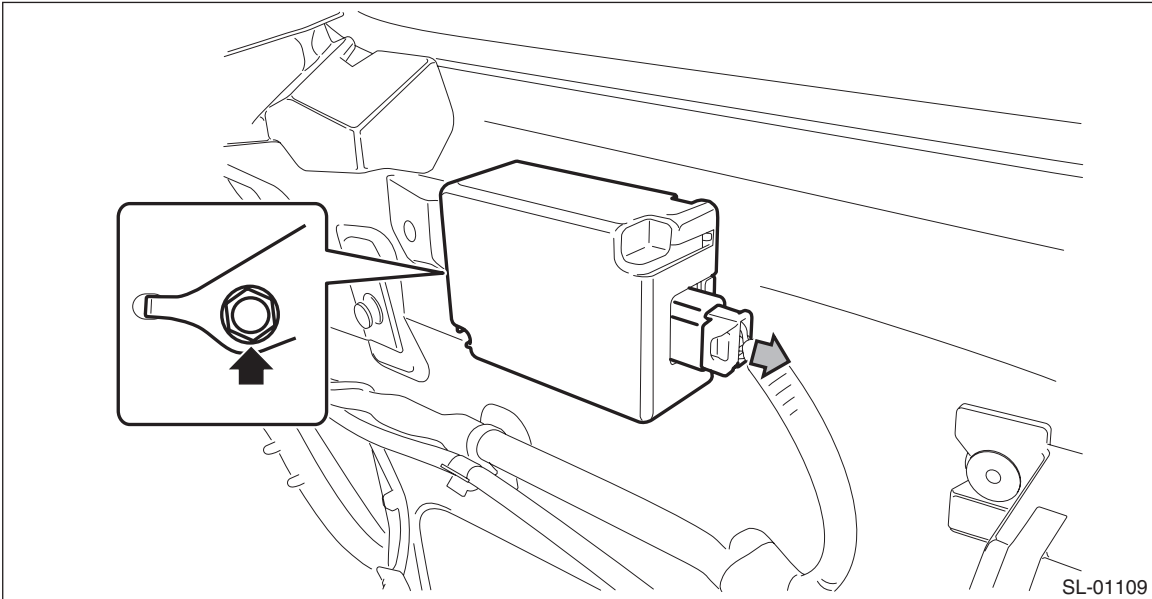

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Receiver: 13 N·m (1.33 kgf-m, 9.6 ft-lb)

C: INSPECTION

- 1) Check if the door lock operates when the front lock button and rear lock button are operated.
- 2) If the system does not operate normally as the result of inspection, refer to “General Diagnostic Table” of the “KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)” section. <Ref. to KPS(diag)-86, KEYLESS ACCESS SYSTEM, INSPECTION, General Diagnostic Table.>