



37. Keyless Access CM

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the instrument panel lower cover. <Ref. to EI-63, REMOVAL, Instrument Panel Lower Cover.>
- 3) Remove the relay & fuse box.
 - (1) Disconnect connectors.
 - (2) Remove the bolts and remove the relay & fuse box.

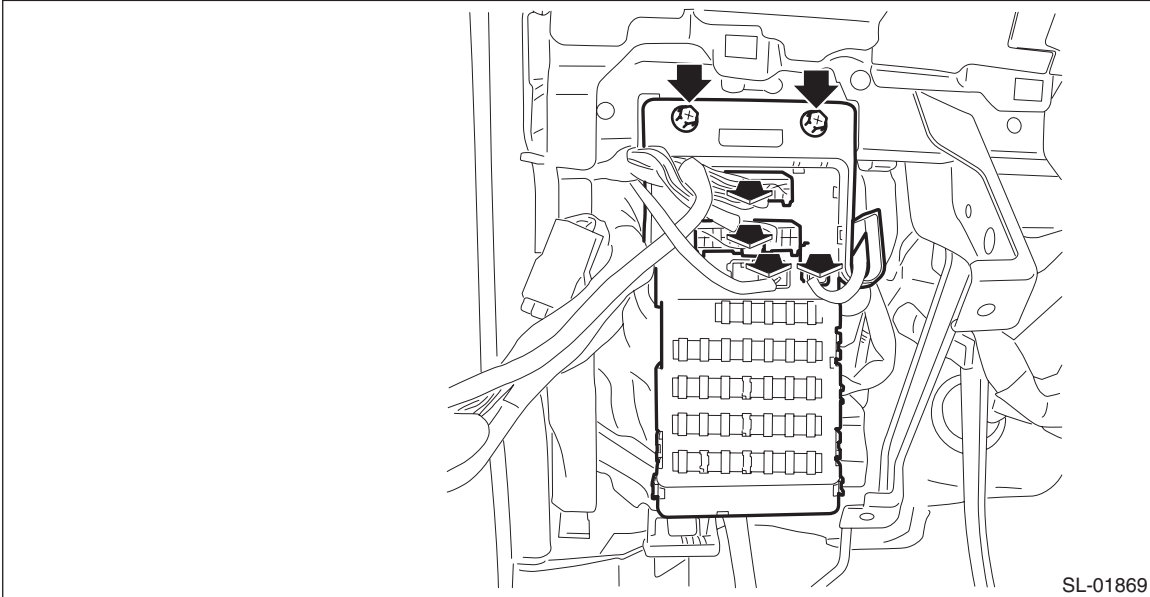


- 4) Remove the holder.
 - (1) Disconnect the connector.
 - (2) Remove the bolt and remove the connector holder.

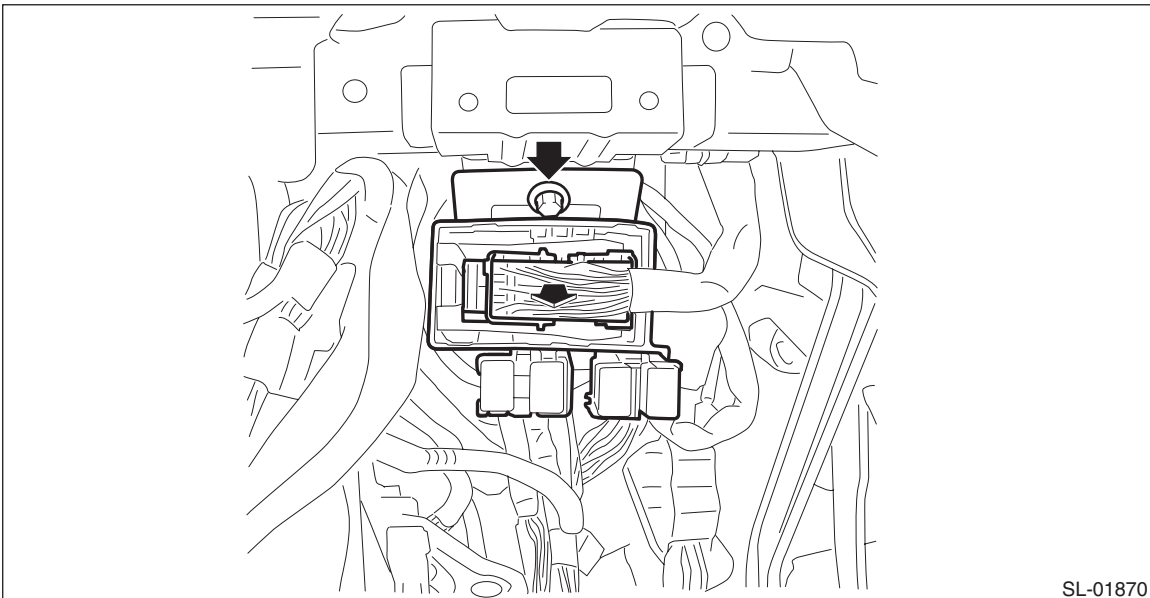

Keyless Access CM

SECURITY AND LOCKS

- 5) Remove the keyless access CM.
 - (1) Disconnect connectors.
 - (2) Remove the nut and remove the keyless access CM.

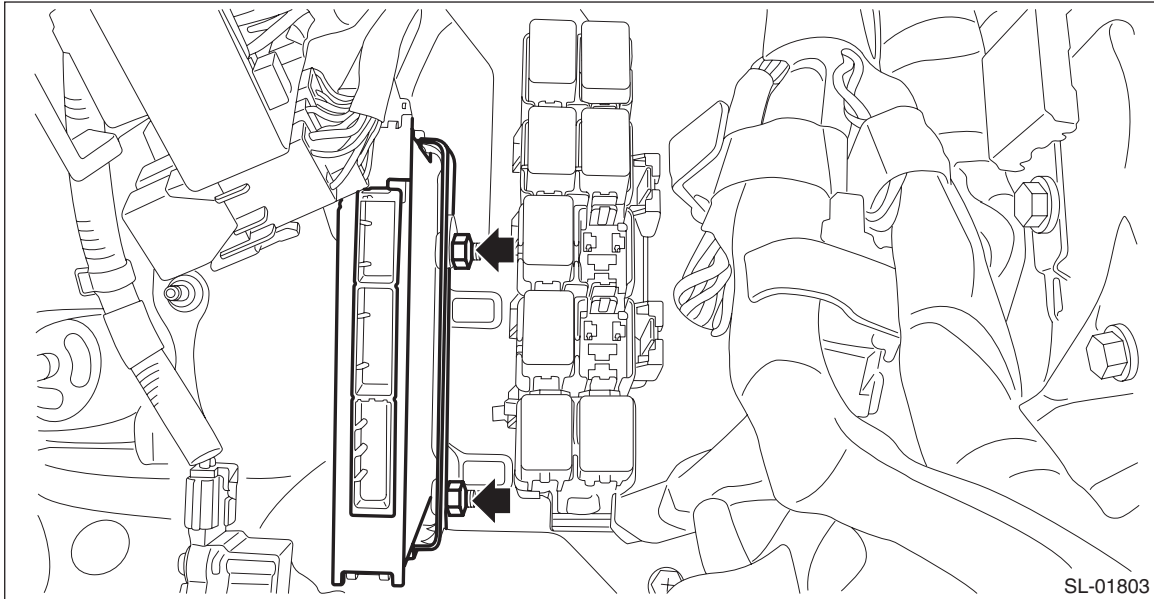

B: INSTALLATION

CAUTION:

Registration of the immobilizer is necessary when a immobilizer-related control module has been replaced. For detailed operation procedure, refer to the “REGISTRATION MANUAL FOR IMMOBILIZER”.

Install each part in the reverse order of removal.

Tightening torque:

Keyless access CM: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

Relay & fuse box: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)