

Function Setting (Customize)

SECURITY AND LOCKS

46. Function Setting (Customize)

A: OPERATION

Disabling/Activating the keyless access system

The following functions are disabled when the keyless access system functions are disabled:

- LOCK function performed by the operation of touch sensor on the door outer handle
- Rear gate LOCK function by rear lock button operation
- UNLOCK function by the door touch sensor
- Rear gate open function by rear gate opener button operation in the rear gate lock condition
- Lockout prevention feature
- Warning function
- Engine starting control using keyless access collation

B: PROCEDURE

1) Check that the vehicle status is as follows:

- Ignition switch OFF
- One window is completely open
- Keyless access system is activated (or disabled if re-activating)

2) Sit in the driver's seat with the door closed and press the door lock switch to UNLOCK once.

3) Open the driver's door within five seconds.

4) Within 5 seconds, with the driver's door opened, slowly press the door lock switch to UNLOCK twice.

5) Within 30 seconds, perform the closing → opening operation of the driver's door twice.

6) Within 30 seconds, with the driver's door opened, slowly press the door lock switch to UNLOCK twice.

7) Within 30 seconds, perform the closing → opening operation of the driver's door once.

8) Within five seconds, close the driver's door.

- The access buzzer sounds once (long sound) to indicate that the keyless access system is disabled (when the system is already disabled, the buzzer sounds once shortly to indicate that it is activated).

NOTE:

- Perform the same procedures to re-activate the keyless access system from the disabled condition.
- If the driver's door is opened or closed in step 4) or step 6), the cancel operation is disabled.