

Door Cord

WIRING SYSTEM

64. Door Cord

A: LOCATION


| Connector | | | | Connecting to | |
|-----------|------|-----------|------|---------------|--|
| No. | Pole | Color | Area | No. | Description |
| D2 | 2 | ★ | C-2 | | Front door speaker RH |
| D3 | 6 | Dark gray | B-2 | | Front power window motor RH |
| D5 | 6 | ★ | C-3 | | Outer mirror assembly LH (without mirror turn signal) |
| | 10 | ★ | C-4 | | Outer mirror assembly LH (with mirror turn signal) |
| D7 | 3 | ★ | C-3 | | Power window main switch |
| D8 | 6 | ★ | B-3 | | Status switch RH |
| D9 | 6 | ★ | C-4 | | Status switch LH |
| D10 | 2 | ★ | C-4 | | Door step light LH |
| D12 | 2 | ★ | C-4 | | Front door speaker LH |
| D13 | 6 | Dark gray | C-4 | | Front power window motor LH |
| D15 | 6 | ★ | B-2 | | Outer mirror assembly RH (without mirror turn signal) |
| | 10 | ★ | B-2 | | Outer mirror assembly RH (with mirror turn signal) |
| D17 | 8 | ★ | B-2 | | Front power window sub-switch |
| D18 | 2 | ★ | C-4 | | Front door lock actuator LH |
| D20 | 2 | ★ | B-2 | | Door step light RH |
| D22 | 8 | ★ | C-4 | R10 | Rear wiring harness LH |
| D23 | 2 | ★ | C-4 | | Rear door speaker LH |
| D24 | 6 | Dark gray | B-4 | | Rear power window motor LH |
| D25 | 8 | ★ | B-4 | | Rear power window sub-switch LH |
| D26 | 2 | ★ | B-5 | | Rear door lock actuator LH |
| D28 | 8 | ★ | B-3 | R13 | Rear wiring harness RH |
| D29 | 2 | ★ | B-3 | | Rear door speaker RH |
| D30 | 6 | Dark gray | B-3 | | Rear power window motor RH |
| D31 | 8 | ★ | B-3 | | Rear power window sub-switch RH |
| D32 | 2 | ★ | B-3 | | Rear door lock actuator RH |
| D55 | 10 | Black | B-3 | | Oscillator RH |
| D56 | 6 | ★ | B-2 | | Front lock button RH and keyless access exterior antenna |
| D65 | 10 | Black | B-4 | | Oscillator LH |
| D66 | 6 | ★ | B-4 | | Front lock button LH and keyless access exterior antenna |
| D72 | 2 | ★ | B-3 | | Front door lock actuator RH |
| D83 | 28 | ★ | B-2 | i76 | Instrument panel wiring harness |
| D84 | 28 | ★ | C-3 | i101 | |
| D95 | 16 | ★ | C-3 | | Power window main switch |
| D125 | 5 | ★ | B-2 | | Passenger's seat door lock switch |
| D143 | 8 | ★ | C-4 | | Seat position memory switch |
| D144 | 12 | ★ | C-2 | D146 | Adapter cord (power window sub-switch) |
| D145 | 20 | ★ | C-3 | D147 | Adapter cord (power window main switch) |
| D146 | 12 | ★ | C-2 | D144 | Front door cord RH |
| D147 | 20 | ★ | C-3 | D145 | Front door cord LH |
| D148 | 12 | ★ | C-3 | i197 | Instrument panel wiring harness |

★ : White or natural color

Door Cord

WIRING SYSTEM

| Connector | | | | Connecting to | |
|-----------|------|--------|------|---------------|-----------------------------|
| No. | Pole | Color | Area | No. | Description |
| AB58 | 2 | Yellow | C-4 | | Front door impact sensor LH |
| AB62 | 2 | Yellow | C-3 | R123 | Rear wiring harness LH |
| AB63 | 2 | Yellow | C-1 | R124 | Rear wiring harness RH |
| AB64 | 2 | Yellow | B-3 | | Front door impact sensor RH |

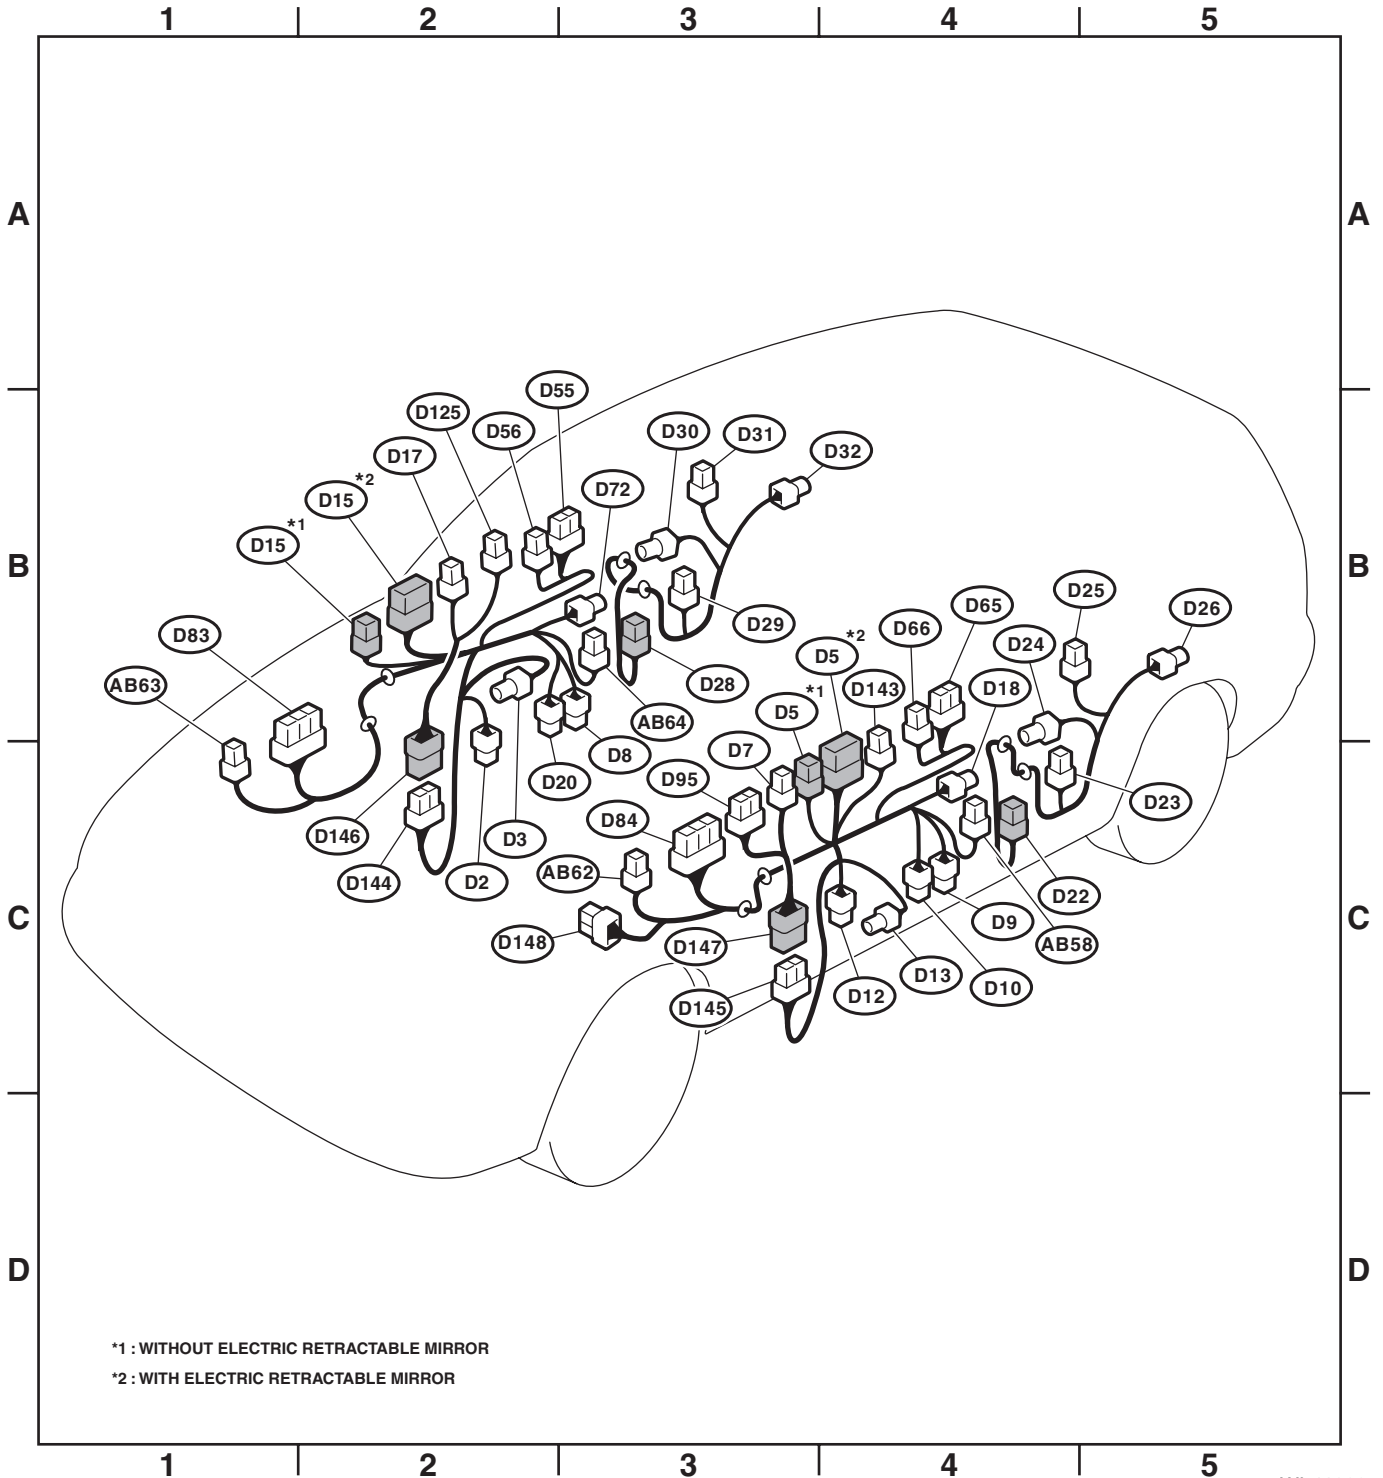

WI-41398