10.Clear Memory Mode

A: OPERATION

Clear the memory in the following steps after the malfunction is repaired. For details concerning DTC clear operation, refer to "Subaru Select Monitor". <Ref. to AB(diag)-32,

Subaru Select Monitor.>