


6. Airbag Control Module I/O Signal

A: ELECTRICAL SPECIFICATION

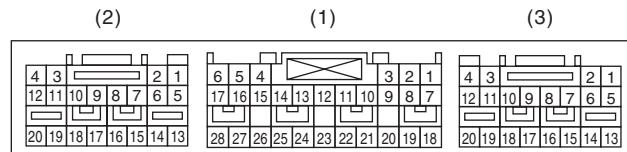

AB-00937

- Terminal numbers in airbag control module connector are shown in the figure.
- Airbag warning light illuminates when the connector is removed from airbag control module.

Airbag Control Module I/O Signal

AIRBAG SYSTEM (DIAGNOSTICS)

Item		Control module terminal No.
Data link connector		(1)-12
Combination meter		(1)-3
Battery power supply	Common use fuse	(1)-6
	Dedicated fuse	(1)-5
Passenger's airbag module level one	+	(1)-10
	-	(1)-11
Passenger's airbag module level two	+	(1)-8
	-	(1)-7
Driver's airbag module level one	+	(1)-14
	-	(1)-13
Driver's airbag module level two	+	(1)-16
	-	(1)-17
Front sub sensor LH	Power supply and communication	(1)-15
	GND	(1)-26
Front sub sensor RH	Power supply and communication	(1)-9
	GND	(1)-20
Ground line (GND)		(1)-27
		(1)-28
Passenger's airbag OFF indicator		(1)-1
Passenger's airbag ON indicator		(1)-18
Passenger's seat belt warning light (integrated module)		(1)-24
Seat belt buckle switch LH	+	(2)-19
	-	(2)-2
Seat position sensor LH	+	(2)-4
	-	(2)-3
Seat belt pretensioner LH	+	(2)-6
	-	(2)-5
Side airbag sensor LH	Power supply and communication	(2)-16
	GND	(2)-18
	+	(2)-17
	-	(2)-20
Side airbag module LH	+	(2)-10
	-	(2)-9
Curtain airbag sensor LH	Power supply and communication	(2)-14
	GND	(2)-13
	+	(2)-15
	-	(2)-1
Curtain airbag module LH	+	(2)-11
	-	(2)-12
Seat belt pretensioner RH	+	(3)-11
	-	(3)-12
Side airbag sensor RH	Power supply and communication	(3)-17
	GND	(3)-15
	+	(3)-16
	-	(3)-13
Side airbag module RH	+	(3)-7
	-	(3)-8

Airbag Control Module I/O Signal

AIRBAG SYSTEM (DIAGNOSTICS)

Item		Control module terminal No.
Curtain airbag sensor RH	Power supply and communication	(3)-19
	GND	(3)-20
	+	(3)-18
	-	(3)-4
Curtain airbag module RH	+	(3)-6
	-	(3)-5
Occupant detection control module	+	(3)-1
	-	(3)-2

B: WIRING DIAGRAM

Refer to the WI section wiring diagram. <Ref. to WI-69, WIRING DIAGRAM, Airbag System.>