

4. Horn Switch

A: REMOVAL

CAUTION:

Before servicing, be sure to read the notes in the “AB” section for proper handling of the driver’s airbag module. <Ref. to AB-4, CAUTION, General Description.>

NOTE:

Horn switch is a unit with the driver’s airbag module.


- 1) Disconnect the ground cable from the battery.
- 2) Remove the driver’s airbag module. <Ref. to AB-14, REMOVAL, Driver’s Airbag Module.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between horn switch terminal and airbag module bracket.

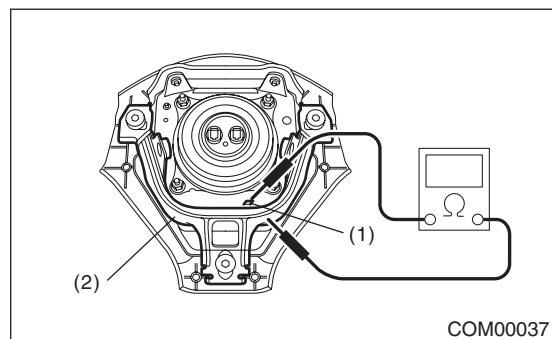

- (1) Airbag module bracket
- (2) Horn switch terminal

Switch position	Terminal No.	Resistance
When horn switch is pushed.	Horn switch terminal and airbag module bracket	Less than 1 Ω
When horn switch is not pushed.		1 M Ω or more

Horn Switch

COMMUNICATION SYSTEM

GLASS/WINDOWS/MIRRORS

GW

	Page
1. General Description	2
2. Power Window System	6
3. Power Window Control Switch	7
4. Front Door Glass	9
5. Front Regulator and Motor Assembly	10
6. Remote Control Mirror System	11
7. Scalp Cap	12
8. Outer Mirror Assembly	13
9. Outer Mirror	14
10. Remote Control Mirror Switch	15
11. Rear Door Glass	16
12. Rear Regulator and Motor Assembly	17
13. Windshield Glass	18
14. Front Quarter Glass	22
15. Rear Gate Glass	23
16. Rear Window Defogger System	25
17. Rear Window Defogger	26
18. Rear Quarter Glass	28
19. Sunroof Glass	29
20. Rearview Mirror	30
21. Wiper Deicer System	31
22. Wiper Deicer Switch	32