
## 1. General Description

## A: COMPONENT

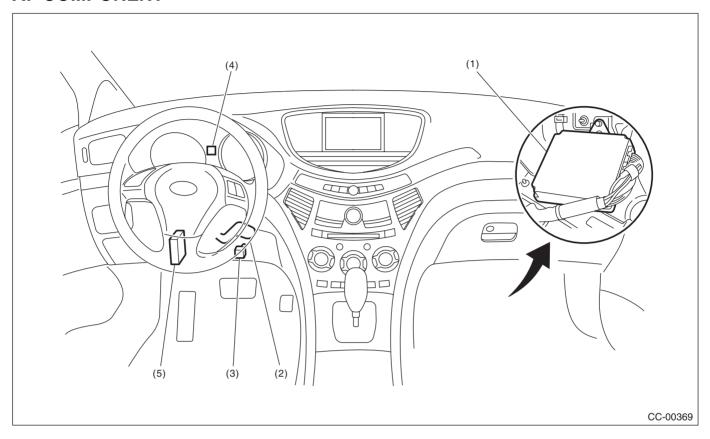

- (1) Engine control module (ECM)
- (2) Cruise control command switch
- (3) Stop light & brake switch
- (4) Cruise indicator light and cruise set indicator light
- (5) Transmission control module (TCM)

## **B: CAUTION**

- Before disassembling or reassembling parts, always disconnect the battery ground cable from battery. When repairing the audio, control module, etc. which are provided with memory functions, record the memory contents before disconnecting the ground cable from battery. Otherwise, the memory will be cleared.
- Reassemble the parts in the reverse order of disassembly unless otherwise indicated.
- Adjust the parts to specifications specified in this manual.
- Connect the connectors securely during reassembly.
- After reassembly, ensure functional parts operate properly.

## C: PREPARATION TOOL

| TOOL NAME      | REMARKS                                    |
|----------------|--|
| Circuit tester | Used for measuring resistance and voltage. |