

2. Cruise Control Unit

A: NOTE

The control of cruise control system is carried out in Engine control module (ECM).

B: REMOVAL

<Ref. to FU(H6DO)-33, REMOVAL, Engine Control Module (ECM).>

C: INSTALLATION

<Ref. to FU(H6DO)-33, INSTALLATION, Engine Control Module (ECM).>