

# Stop Light & Brake Switch

CRUISE CONTROL SYSTEM

## 4. Stop Light & Brake Switch

### A: REMOVAL


- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the connector from the stop light & brake switch, and then remove the switch. <Ref. to BR-38, REMOVAL, Stop Light Switch.>

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Measure the resistance of brake switch (A) and stop light switch (B).

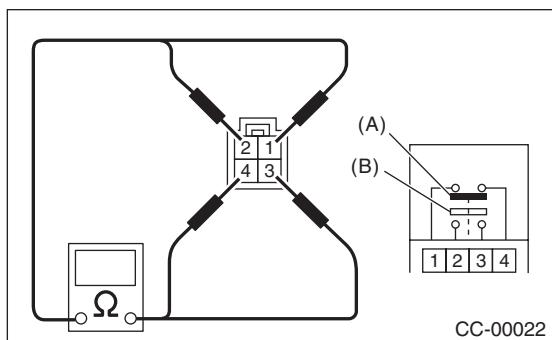

Switch	Pedal	Terminal No.	Standard
Brake	Released	1 and 4	Less than 1 Ω
	Depressed	1 and 4	1 MΩ or more
Stop light	Released	2 and 3	1 MΩ or more
	Depressed	2 and 3	Less than 1 Ω

If NG, replace the stop light & brake switch.

# CRUISE CONTROL SYSTEM (DIAGNOSTICS)

# CC(*diag*)

---

	Page
1. Basic Diagnostic Procedure .....	2
2. General Description .....	4
3. Electrical Component Location .....	5
4. Engine Control Module (ECM) I/O Signal .....	6
5. Subaru Select Monitor .....	7
6. Diagnostics with Phenomenon .....	9
7. List of Diagnostic Trouble Code (DTC) .....	12
8. Diagnostic Procedure with Diagnostic Trouble Code (DTC) .....	15