28.Front Accessory Power Supply Socket

A: REMOVAL


1) Disconnect the ground cable from the battery.

2) Remove the console box. <Ref. to EI-38, RE-MOVAL, Console Box.>

3) Disconnect the harness connector, and remove the accessory power supply socket.

NOTE:

The socket can be pulled out by unlocking the accessory socket lock in 2 locations and turning the socket to the left.

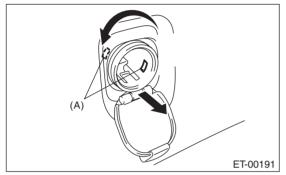

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Confirm that the accessory socket is locked and can not be pulled out.