


29.Rear Accessory Power Supply Socket

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the left rear quarter lower trim. <Ref. to EI-45, REMOVAL, Rear Quarter Trim.>
- 3) Disconnect the harness connector, and remove the accessory power supply socket.

NOTE:

The socket can be pulled out by unlocking the accessory socket lock in 2 locations and turning the socket to the left.

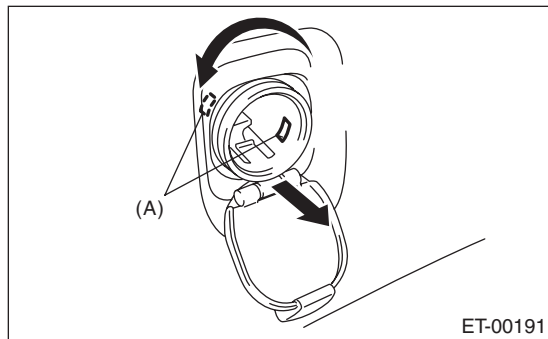

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Confirm that the accessory socket is locked and can not be pulled out.