

6. Rearview Camera System

A: WIRING DIAGRAM

<Ref. to WI-123, WIRING DIAGRAM, Rearview Camera System.>

B: INSPECTION


Symptom	Repair order
The screen of rear view camera is not displayed. (The navigation screen is displayed normally.)	<ol style="list-style-type: none"> 1. Check the back sensor for each connection: Make sure that the back sensor is ON. <Ref. to ET-6, CHECK THE BACK SENSOR, INSPECTION, Navigation System.> 2. Check the rear view camera connection. 3. Check the rear view camera control module.
Marker is not displayed.	<ol style="list-style-type: none"> 1. Check the rear view camera connection. 2. Check the rear view camera control module.

C: ADJUSTMENT

- 1) Park vehicle on a level surface with wide space around the vehicle rear side.
- 2) Adhere tapes on the floor of the vehicle rear side as shown in the figure, as the datum point of markers.

NOTE:

Use a tape of approx. 30 mm width in bright colors as a criterion.

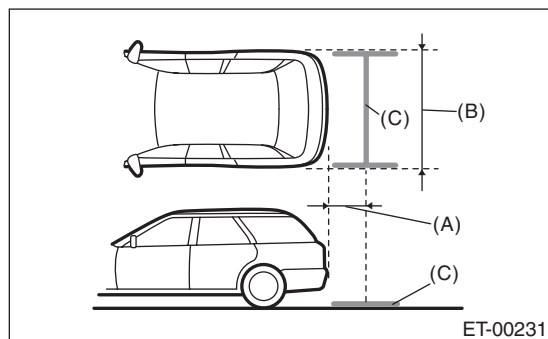


- (A) 500 mm (19.7 in)
- (B) 2180 mm (85.8 in)
- (C) Tapes as criteria

- 3) While pressing DEST key and INFO key of navigation system, turn the ignition switch to ON to enter the test mode.
- 4) Touch REAR CAMERA MODE in the monitor and go to the maker adjustment mode.

CAUTION:

Do not select other than REAR CAMERA MODE; the navigation system or the navigation monitor may not operate normally.

- 5) Touch the monitor to change maker pattern.

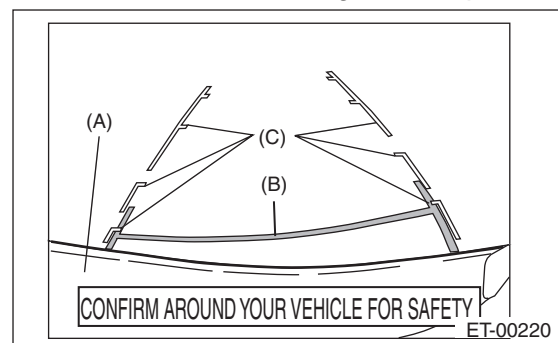

- (A) Rear bumper
- (B) Tapes adhered in step 2)
- (C) Marker

NOTE:

Adjust the marker so that the marker laps over the tape or is placed outside of the tape.