

Multi-function Display (MFD) System

ENTERTAINMENT

7. Multi-function Display (MFD) System

A: WIRING DIAGRAM

<Ref. to WI-124, WIRING DIAGRAM, Multi-function Display (MFD) System.>

B: INSPECTION

Symptom	Repair order
No power coming in. (Light does not illuminate.)	<ol style="list-style-type: none"> 1. Check the fuse and power supply for the display. 2. Check the ground circuit of the display. 3. Remove the display to repair.
A specific light does not operate.	<ol style="list-style-type: none"> 1. Check the display. 2. Check the output circuit between unit and display.

1. MFD ERROR DISPLAY AND FAULT CONTENT

Display contents	Fault cause	
CHECK_DISK	<ul style="list-style-type: none"> • During playback, it was not possible to read data from the CD due to scratches on the CD, etc. • Disc inserted upside-down, cannot detect disc. • Because of a focus error, cannot read disc. • An error occurred in the decoder section. • A problem occurred in the internal circuit during playback due to high temperature, etc. 	
MECHA_ERROR	<ul style="list-style-type: none"> • During disc loading, a problem occurred in the traverse drive. • Operation became impossible during disc change, loading, or eject. 	
NO_FILE	<ul style="list-style-type: none"> • After disc read operation is completed, the number of files was 0. • A disc with no data was inserted. 	
ERROR_**	01	<ul style="list-style-type: none"> • Disc is dirty, or is upside down. • Nothing is recorded. • Is not an audio disc. • There are scratches on the disk. • A disc that cannot be played back was used.
	02	
	03	
	04	A mechanical error/operational error of some sort occurred.
NO_DISC	No disc is inserted.	

NOTE:

When the above errors are displayed, check the disc, and if no problems can be found, repair or replace the unit.