


## 6. Rear Door

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear door trim. <Ref. to EI-35, REMOVAL, Door Trim.>
- 3) Remove the rear speaker. <Ref. to ET-17, REMOVAL, Rear Speaker.>
- 4) Remove the sealing cover. <Ref. to EB-21, REMOVAL, Rear Sealing Cover.>
- 5) Remove the rear door glass. <Ref. to GW-16, REMOVAL, Rear Door Glass.>
- 6) Remove the door sash and rear door regulator and motor assemblies. <Ref. to GW-17, REMOVAL, Rear Regulator and Motor Assembly.>
- 7) Remove the rear inner remote. <Ref. to SL-37, REMOVAL, Rear Inner Remote.>
- 8) Remove the rear door latch. <Ref. to SL-39, REMOVAL, Rear Door Latch and Door Lock Actuator Assembly.>
- 9) Remove the rear outer handle. <Ref. to SL-38, REMOVAL, Rear Outer Handle.>
- 10) Remove the rear door inner weather strip.


#### NOTE:

If the weather strip clip is removed with excessive force, the weather strip may be damaged. Be sure to use clip remover to remove.

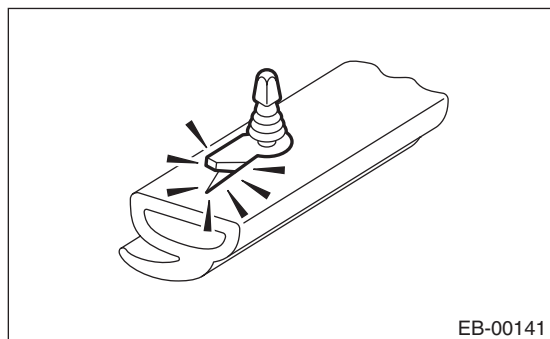


EB-00141

- 11) Remove the bolts and nuts to remove the door checker.

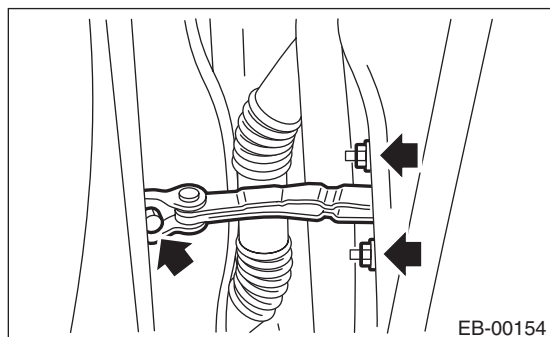


EB-00154

- 12) Pull the door harness connector inside the center pillar, then disconnect the connector.

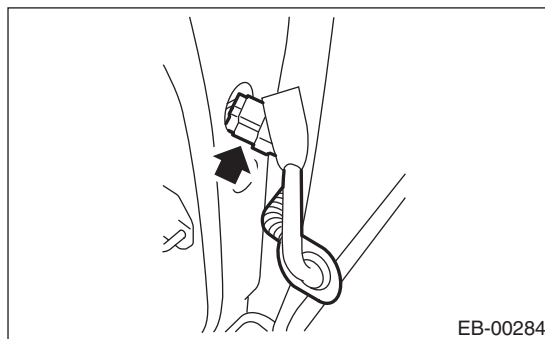


EB-00284

- 13) Put a wooden block on jack and place jack under the rear door. Support the rear door with the jack to protect it from damage.

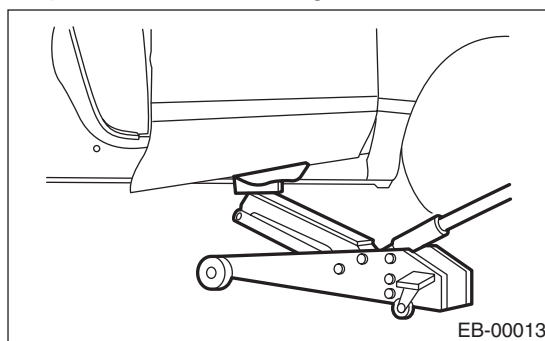

EB-00013

- 14) Remove the door-side bolts for upper and lower hinges to remove the rear door panel.

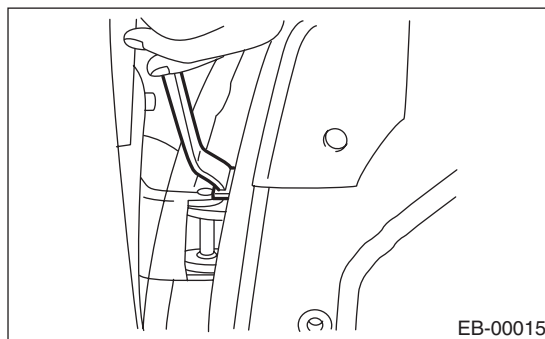

EB-00015


- 15) Remove the door hinge from vehicle.

# Rear Door

## EXTERIOR BODY PANELS

### B: INSTALLATION

- 1) Put a wooden block on jack and place the rear door on that.

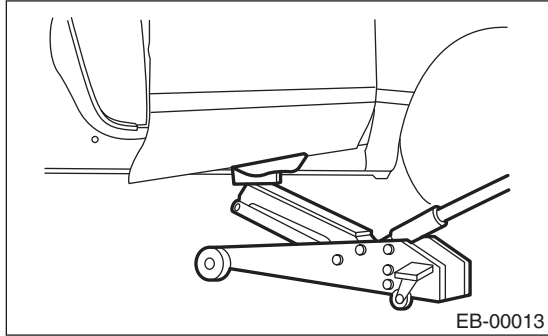

- 2) Apply grease to the moving part of door hinges.
- 3) Install the rear door to upper hinge and lower hinge adjusting by jack.
- 4) Tighten bolt of door checker.
- 5) Connect the door harness connector.


#### **Tightening torque:**

**Refer to "COMPONENT" of "General Description".**

**<Ref. to EB-10, REAR DOOR PANEL, COMPONENT, General Description.>**

### C: ADJUSTMENT

- 1) Open the rear door, loosen the door-side bolts of upper and lower hinges to align the position for vertical and horizontal direction of rear door panel.

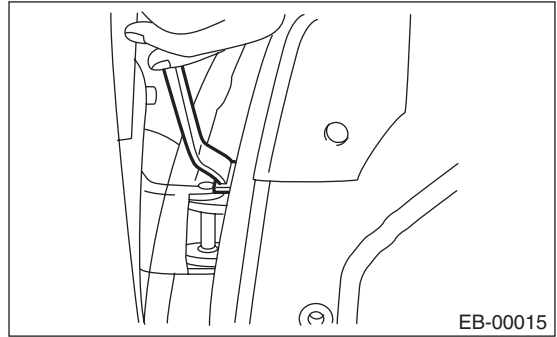

- 2) Loosen the screw (A) and tap striker (B) using plastic hammer to adjust the gap between rear end surface of rear door panel and body surface.

#### **CAUTION:**

**Do not use an impact wrench. Welding area on the striker nut plate is easily broken.**

