



25.Rear Gate Garnish

A: REMOVAL

1) Remove the hexagon cap nut (A).

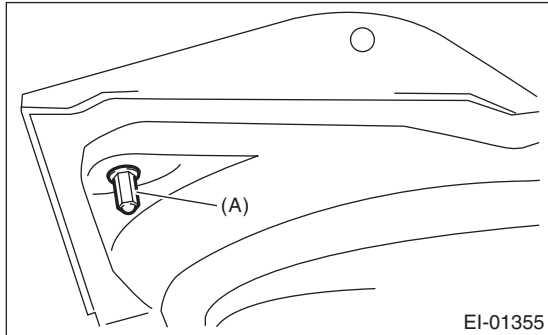

2) Remove the rear gate garnish.

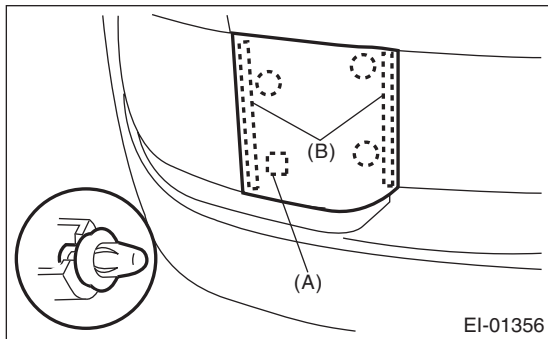

- (A) Hexagon cap nut
- (B) Double-sided tape

B: INSTALLATION

Use new double-sided tapes, and install in the reverse order of removal.

NOTE:

Refer to the installing procedure of side garnish.

Tightening torque:

4.5 N·m (0.46 kgf-m, 3.32 ft-lb)