


## 27.Trailer Hitch

### A: REMOVAL


- 1) Remove the spare tire hoist. <Ref. to WT-14, REMOVAL, Spare Tire Hoist.>
- 2) Remove the bolt, and then detach the main frame.

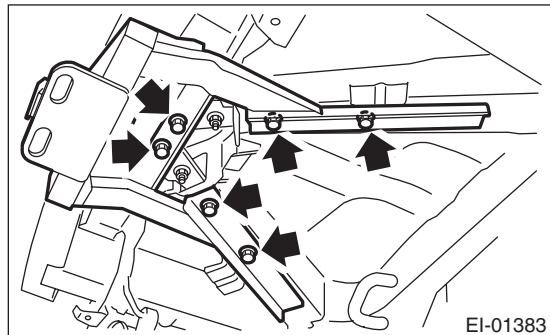

### CAUTION:

**The trailer hitch main frame is heavy. Be careful when removing.**

- 3) Remove the bolts, and then remove the center frame.

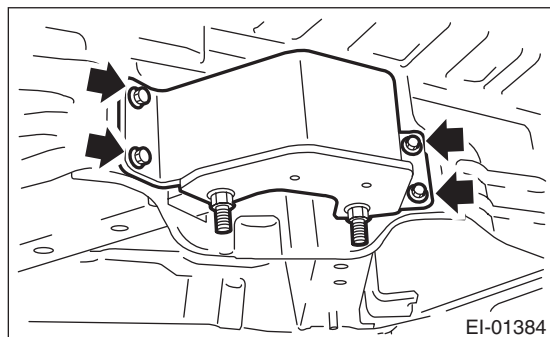

- 4) Remove the side frame from the vehicle.

### B: INSTALLATION

Install in the reverse order of removal.

#### **Tightening torque:**

**Refer to "COMPONENT" of "General Description".**

**<Ref. to EI-16, TRAILER HITCH, COMPONENT, General Description.>**

# EXTERIOR BODY PANELS



---

	<b>Page</b>
1. General Description .....	2
2. Front Hood .....	13
3. Front Fender .....	15
4. Front Door .....	16
5. Front Sealing Cover .....	18
6. Rear Door .....	19
7. Rear Sealing Cover .....	21
8. Rear Gate .....	22