


Fuel Tank Protector

EXTERIOR/INTERIOR TRIM

3. Fuel Tank Protector

A: REMOVAL

1) Remove the bolts (A) and nuts (B), and then remove the fuel tank protector.

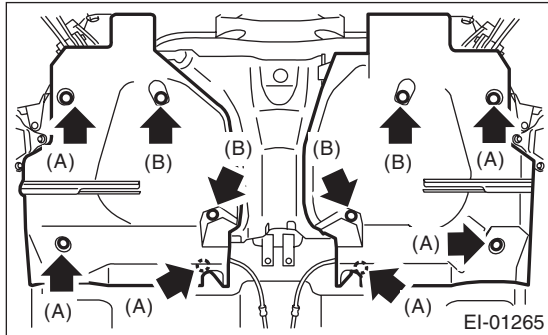

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Bolt

17.5 N·m (1.78 kgf·m, 12.9 ft·lb)