

# Power Window System

GLASS/WINDOWS/MIRRORS

---

## 2. Power Window System

### A: WIRING DIAGRAM

<Ref. to WI-132, Power Window System.>

### B: INSPECTION

Symptom	Repair order
All power windows do not operate.	<ol style="list-style-type: none"><li>1. Fuse (SBF-4)</li><li>2. Power window circuit breaker</li><li>3. Power window relay</li><li>4. Wiring harness</li><li>5. Body integrated unit</li></ol>
Particular window does not operate.	<ol style="list-style-type: none"><li>1. Power window main switch</li><li>2. Power window sub-switch</li><li>3. Power window motor</li><li>4. Wiring harness</li></ol>
"Window Lock" does not operate.	Power window main switch