


## Blower Resistor (Dual A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

### 10. Blower Resistor (Dual A/C Model)

#### A: REMOVAL


- 1) Remove the left rear quarter trim. <Ref. to EI-45, REMOVAL, Rear Quarter Trim.>
- 2) Disconnect the blower resistor connector.
- 3) Remove the lock (A) and rotate it to the right to remove the blower resistor.

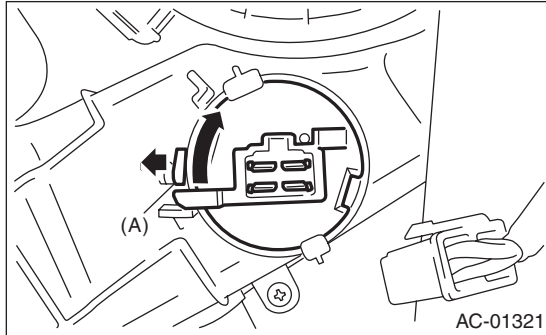

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

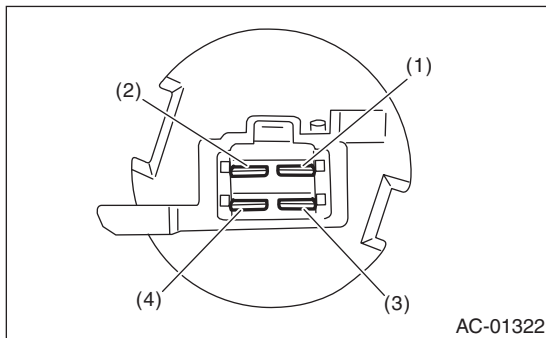

Measure the blower resistor resistance.

Terminal No.	Standard
1 and 3	Approximately 0.42 $\Omega$
1 and 2	Approximately 1.42 $\Omega$
4 and 1	Approximately 3.4 $\Omega$

If NG, replace the blower resistor.