HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

# **12.Control Panel**


### A: REMOVAL

#### 1. FRONT


1) Disconnect the ground cable from the battery.

2) Remove the front console panel. <Ref. to ET-14, REMOVAL, Audio.>

3) Remove the instrument panel ornament and the drivers side and passengers side inner panels.

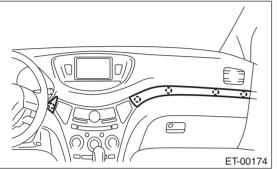

4) Remove the screws, and pull out the control panel.

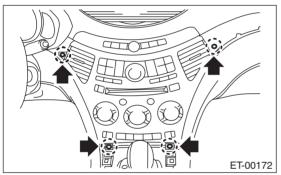

5) Disconnect the harness connectors and remove the front control panel.

### 2. REAR

1) Disconnect the ground cable from the battery.

2) Pull out the storage box from underneath the rear control panel.

3) Push out the panel from the back side.

4) Detach the connectors and remove the rear control panel.

## **B: INSTALLATION**

Install in the reverse order of removal.