

## Ambient Sensor (Auto A/C Model)


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

---

### 22. Ambient Sensor (Auto A/C Model)

#### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the ambient sensor connector.
- 3) Remove the ambient sensor from the radiator lower panel.

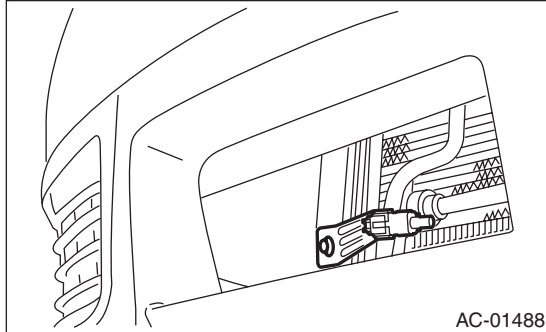

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

<Ref. to AC(diag)-31, AMBIENT SENSOR, Diagnostic Procedure for Sensors.>