

## **In-vehicle Sensor (Auto A/C Model)**

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

---

### **24.In-vehicle Sensor (Auto A/C Model)**

#### **A: REMOVAL**

- 1) Disconnect the ground cable from the battery.
- 2) Remove the instrument panel lower panel on driver's side. <Ref. to EI-36, REMOVAL, Instrument Panel Lower Cover.>
- 3) Disconnect the connector and aspirator hose, remove the catch hook and remove the interior temperature sensor from the knee guard plate.

#### **CAUTION:**

**Be careful not to damage the sensors and interior trim when removing.**

#### **B: INSTALLATION**

Install in the reverse order of removal.

#### **C: INSPECTION**

<Ref. to AC(diag)-33, IN-VEHICLE SENSOR, Diagnostic Procedure for Sensors.>