

# Air Vent Grille


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

## 25. Air Vent Grille


### A: REMOVAL

#### 1. UPPER GRILL

- 1) Disconnect the ground cable from the battery.
- 2) Lift the upper grill, and remove the catch on the hazard switch side.

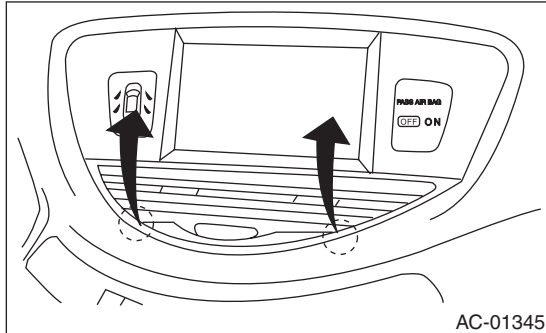


- 3) Hold the side of the monitor and remove the catch on the upper, right and left sides.

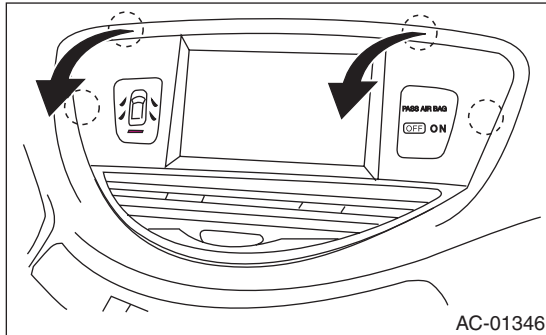

- 4) Detach the connectors and remove the panel.


#### 2. CENTER GRILLE

- 1) Disconnect the ground cable from the battery.
- 2) Remove the front control panel. <Ref. to AC-32, FRONT, REMOVAL, Control Panel.>
- 3) Remove the screw, and remove the center grill

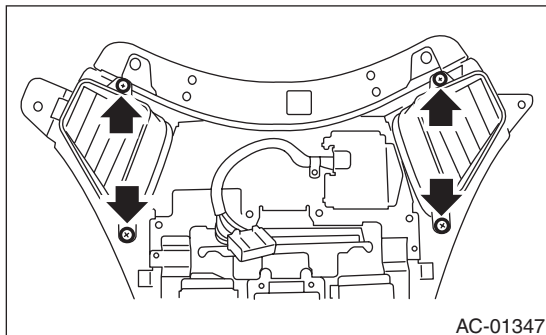


#### 3. SIDE GRILLE

Remove the catch in 2 locations to remove the side air vent grill.

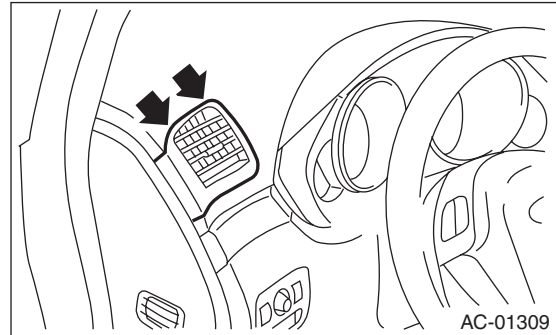

#### 4. ROOF GRILL

Remove the catch, and remove the roof air vent grill.

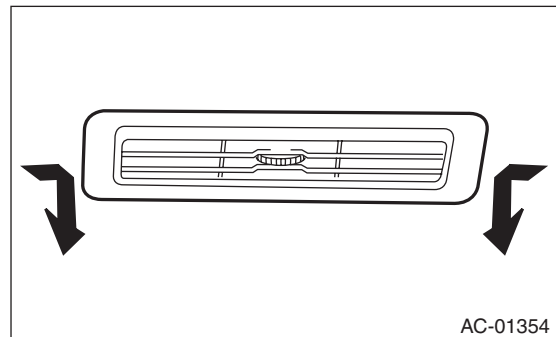

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Check that the direction and amount of air can be adjusted smoothly.
- 2) Check that the adjustment can be maintained in each position.