


## 7. Blower Motor Unit Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the glove box. <Ref. to EI-37, REMOVAL, Glove Box.>
- 3) Disconnect the connectors of the A/C control module, intake door actuator, blower motor, power transistor and blower resistor.
- 4) Lift the floor mat.
- 5) Loosen the bolt and nut to remove blower motor unit assembly.

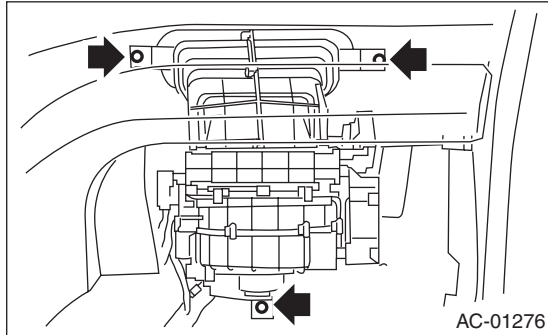

### B: INSTALLATION

Install in the reverse order of removal.

#### ***Tightening torque:***

***Refer to “COMPONENT” of “General Description”. <Ref. to AC-6, HEATER COOLING UNIT, COMPONENT, General Description.>  
<Ref. to AC-8, BLOWER MOTOR UNIT, COMPONENT, General Description.>***