

# Read Diagnostic Trouble Code (DTC)

IMMOBILIZER (DIAGNOSTICS)

---

## 6. Read Diagnostic Trouble Code (DTC)

### A: OPERATION

#### 1. ECM

- 1) On the «Main Menu» display screen, select the {Each System Check}.
- 2) On the «System Selection Menu» display screen, select the {Engine Control System}.
- 3) Select the [OK] after the information of engine type is displayed.
- 4) On the «Engine Diagnosis» screen, select the {DTC Display}.
- 5) On the «Diagnostic Code(s) Display» screen, select the {Current Diagnostic Code(s)} or {History Diagnostic Code(s)}.

#### NOTE:

- For detailed operation procedure, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.
- For detailed concerning DTC, refer to the List of DTC. <Ref. to IM(diag)-14, LIST, List of Diagnostic Trouble Code (DTC).>

#### 2. BODY INTEGRATED UNIT

- 1) On the «Main Menu» display screen, select the {Each System Check}.
- 2) On the «System Selection Menu» display screen, select the {Integ. unit mode}.
- 3) Select the [OK] after the {Integ. unit mode} is displayed.
- 4) On the «Integ. unit failure diag» display screen, select the {Diagnostic Code(s) Display}.

#### NOTE:

- For detailed operation procedure, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.
- For detailed concerning DTC, refer to the List of DTC. <Ref. to IM(diag)-14, LIST, List of Diagnostic Trouble Code (DTC).>