


Warning Box

INSTRUMENTATION/DRIVER INFO

8. Warning Box

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the upper grille. <Ref. to AC-49, UPPER GRILL, REMOVAL, Air Vent Grille.>
- 3) Remove the screws of warning box (1) and pull out the warning box.

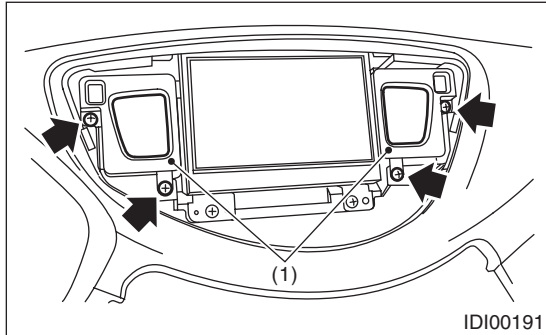

- 4) Disconnect the connector in the rear side of warning box to remove the warning box.

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Make sure the electrical connector is connected securely.
- Make sure that each indicator operates normally.

SEATS

SE

	Page
1. General Description	2
2. Front Seat	7
3. Second-Row Seats	13
4. Third-Row Seats	18
5. Seat Heater System	20
6. Power Seat System	21