


## 17.Side Turn Signal Light Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the mirror. <Ref. to GW-14, REPLACEMENT, Outer Mirror.>
- 3) Remove the scalp cap. <Ref. to GW-12, REPLACEMENT, Scalp Cap.>
- 4) Disconnect the harness connector, remove the 3 mounting screws and then remove the side turn signal light assembly.

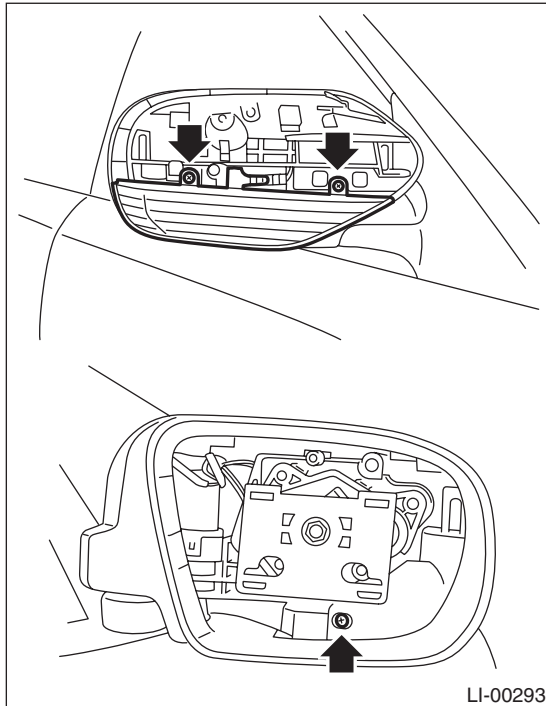

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Install the side turn signal light assembly and check that it blinks normally.
- 2) If it does not blink normally, replace the side turn signal light assembly with a new one.

#### NOTE:

Because a LED (Light Emitting Diode) is used for the side turn signal light, replace the side turn signal light as an assembly if the LED does not turn on.