


24. License Plate Light Assembly

A: REMOVAL

- 1) Remove the rear gate garnish. <Ref. to EI-52, REMOVAL, Rear Gate Garnish.>
- 2) Disengage the clips, and disconnect the connectors, and then detach the license light assembly.

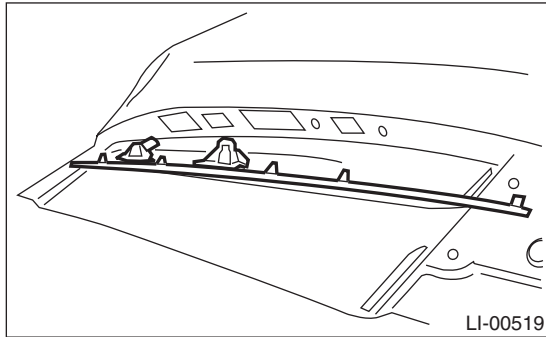

NOTE:

If the model of the vehicle is one with rear view monitor, disconnect the rear view camera connector to remove the rear view camera. <Ref. to ET-26, REMOVAL, Rearview Camera.>

B: INSTALLATION

Install in the reverse order of removal.