


## 29. Luggage Room Light

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the luggage room light body (A).

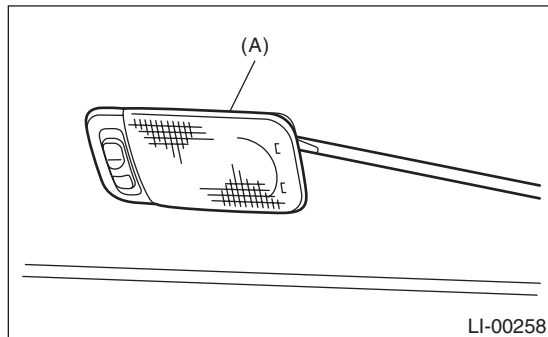

- 3) Disconnect the harness connector and remove the lens.

### B: INSTALLATION

Install in the reverse order of removal.


### C: INSPECTION

#### 1. LUGGAGE ROOM LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new one.

#### 2. LUGGAGE ROOM LIGHT SWITCH

Measure the resistance between luggage room light switch terminals.

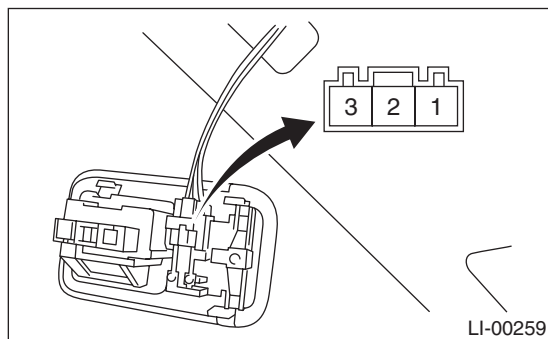

Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
ON	1 and 2	1.5±0.5 Ω
DOOR	2 and 3	1.5±0.5 Ω