



30.Rear Gate Light

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the bulb inspection cover of rear gate trim, then disconnect the harness connectors.

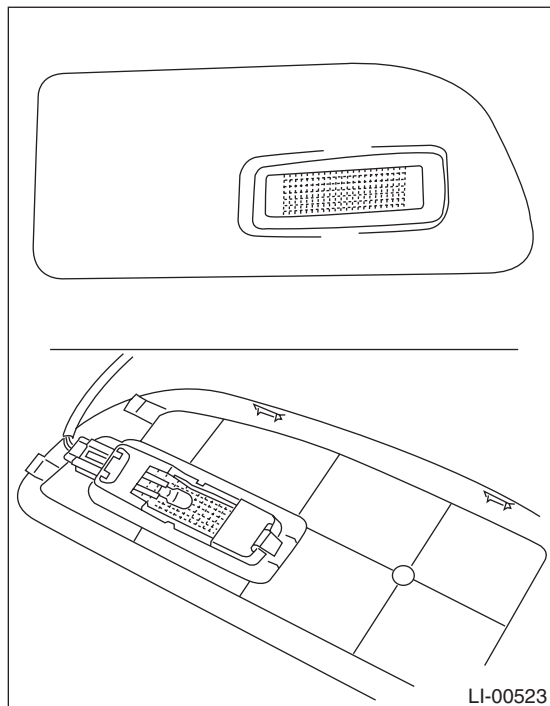

- 3) Remove the bulb.

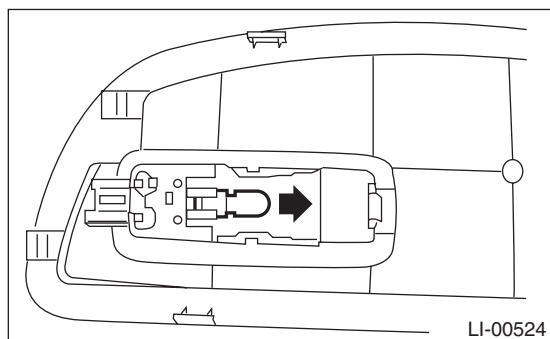

B: INSTALLATION

Install in the reverse order of removal.


C: INSPECTION

1. REAR GATE LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new one.

2. REAR GATE LIGHT SWITCH

Measure the resistance between trunk lid switch terminals.

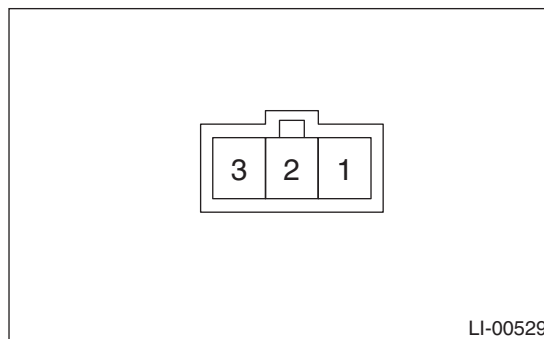

Trunk lid position	Terminal No.	Standard
Close	1 and 3	1 MΩ or more
Open		1.5±0.5 Ω