



## 33. Ignition Switch Illumination

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the screws, and detach the upper column cover and lower column cover.

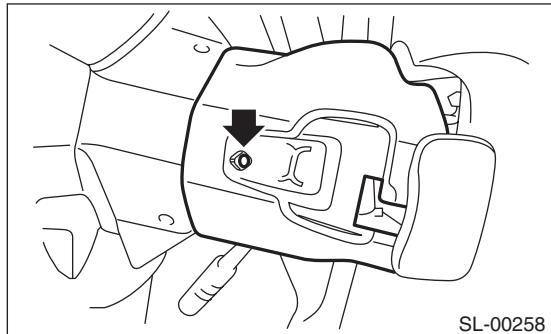

- 3) Disconnect the ignition switch illumination connector (A).
- 4) Turn the ignition switch illumination connector to the left and disconnect it.

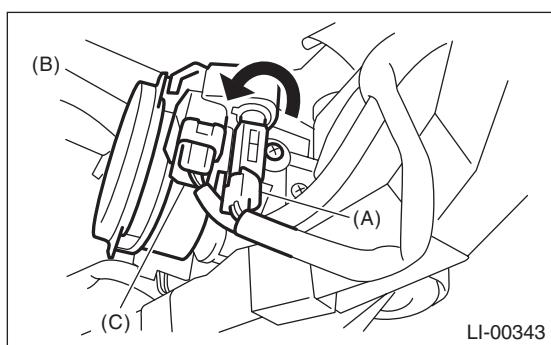

- (A) Ignition switch illumination connector
- (B) Ignition switch illumination
- (C) Immobilizer antenna connector

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Step	Check	Yes	No
<b>1 CHECK THE IGNITION SWITCH ILLUMINATION.</b> Make sure the ignition switch illumination illuminates when driver's side door is open.	Does the ignition switch illumination illuminate?	Ignition switch illumination is normal.  Go to step 2.	
<b>2 CHECK THE IGNITION SWITCH ILLUMINATION.</b> Make sure the ignition switch illumination blinks when the ignition switch is turned to ON.	Does the ignition switch illumination blink?  <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Check the function setting of body integrated unit.  Check the ignition switch illumination circuit. <Ref. to SL-22, CHECK IGNITION SWITCH ILLUMINATION., INSPECTION, Keyless Entry System. >	

# WIPER AND WASHER SYSTEMS

WW

---

	Page
1. General Description .....	2
2. Wiper and Washer System .....	5
3. Combination Switch (Wiper) .....	6
4. Wiper Blade .....	10
5. Washer Tank and Motor .....	12
6. Wiper Relay Unit .....	14
7. Front Wiper Arm .....	15
8. Front Wiper Motor and Link .....	16
9. Front Washer Nozzle .....	17
10. Rear Wiper Arm .....	18
11. Rear Wiper Motor .....	19
12. Rear Washer .....	20