


# Combination Switch (Light)


## 8. Combination Switch (Light)

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the screws and remove the steering column covers (upper and lower).

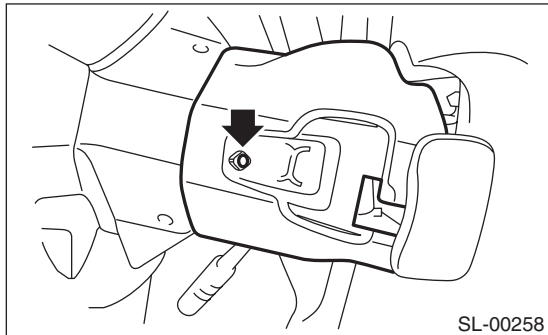

- 3) Disconnect the connector from the combination switch.
- 4) Remove the screws which secure the switch, then remove the combination switch.

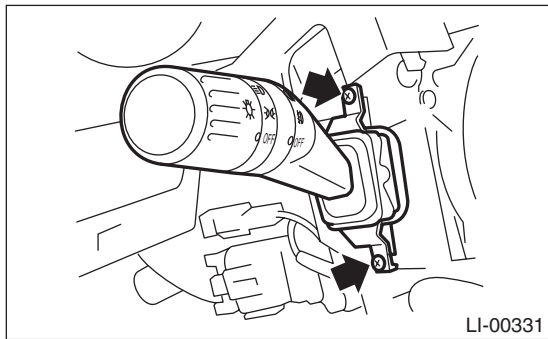


### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Measure the resistance between combination switch terminals.

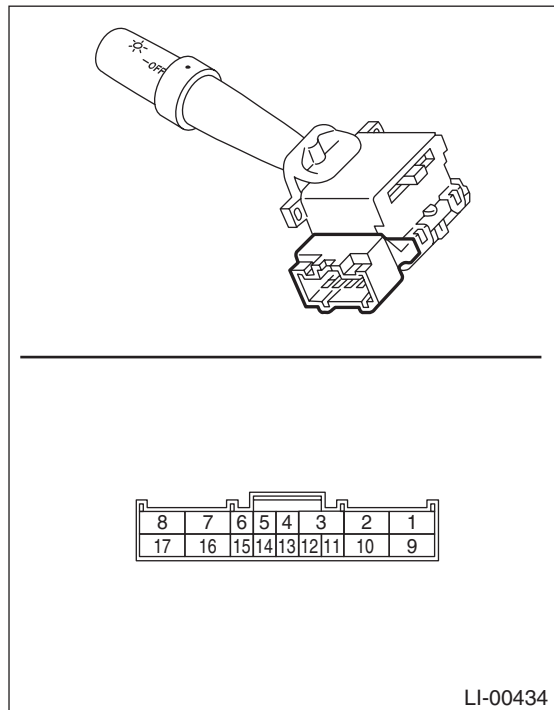

#### 1. LIGHTING SWITCH

| Switch position | Terminal No.  | Standard      |
|-----------------|---------------|---------------|
| OFF             | —             | 1 MΩ or more  |
| Tail            | 14 and 16     | Less than 1 Ω |
| Head            | 13, 14 and 16 | Less than 1 Ω |

#### 2. DIMMER & PASSING SWITCH

| Switch position | Terminal No. | Standard      |
|-----------------|--------------|---------------|
| Passing         | 7, 8 and 16  | Less than 1 Ω |
| Low beam        | 17 and 16    | Less than 1 Ω |
| High beam       | 7 and 16     | Less than 1 Ω |

#### 3. TURN SIGNAL SWITCH

| Switch position | Terminal No. | Standard      |
|-----------------|--------------|---------------|
| Left            | 1 and 2      | Less than 1 Ω |
| Neutral         | —            | 1 MΩ or more  |
| Right           | 2 and 3      | Less than 1 Ω |

#### 4. FRONT FOG LIGHT

| Switch position | Terminal No. | Standard      |
|-----------------|--------------|---------------|
| OFF             | —            | 1 MΩ or more  |
| ON              | 10 and 11    | Less than 1 Ω |