


11. Rear Door Latch and Door Lock Actuator Assembly

A: REMOVAL

- 1) Raise the door glass to the top position.
- 2) Disconnect the ground cable from the battery.
- 3) Remove the rear door trim. <Ref. to EI-35, REMOVAL, Door Trim.>
- 4) Remove the cable from rear inner remote. <Ref. to SL-37, REMOVAL, Rear Inner Remote.>
- 5) Remove the sealing cover. <Ref. to EB-21, REMOVAL, Rear Sealing Cover.>
- 6) Remove the rear sash. <Ref. to GW-17, REMOVAL, Rear Regulator and Motor Assembly.>
- 7) Pull out the cable from the cable clamp of the outer handle.
- 8) Remove the three screws and one bolt.

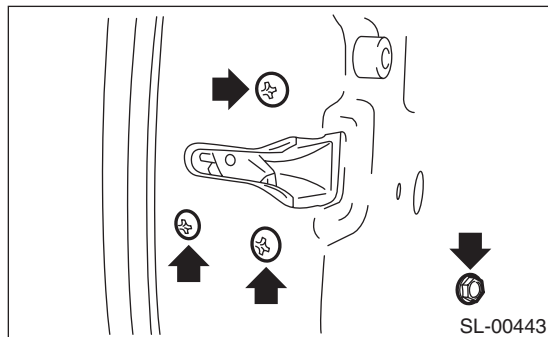

- 9) Disconnect the connectors, and then remove the rear door latch and door lock actuator assembly.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure lock and unlock works correctly after installation.

C: INSPECTION

- 1) Check the cable for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the rear door latch and door lock actuator assembly.
- 2) Check that the lever and cable operates smoothly.