

## 23. Body Integrated Unit

### A: REMOVAL

#### NOTE:

- When replacing the body integrated unit, check the current setting and note it. <Ref. to LAN(diag)-18, CONFIRMATION OF CURRENT SETTING, OPERATION, Subaru Select Monitor.>


- When replacing the body integrated unit, all immobilizer keys also must be replaced and registered again.

- 1) Disconnect the ground cable from the battery.
- 2) Remove the instrument panel lower cover. <Ref. to EI-36, REMOVAL, Instrument Panel Lower Cover.>
- 3) Disconnect the connector of body integrated unit.

#### CAUTION:

- **Be careful to keep water and other foreign materials away from body integrated unit.**
- **Do not install or register an immobilizer related module of other registered vehicles in order to diagnose failures or inspect functions.**

- 4) Remove two mounting nuts for body integrated unit bracket, and remove the bracket.

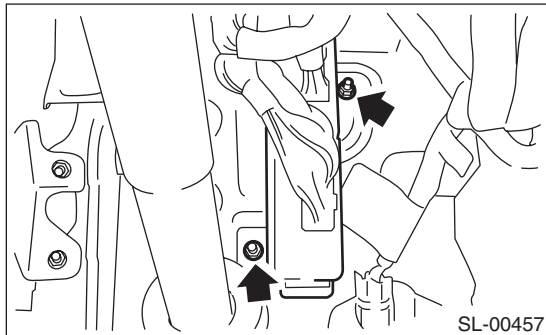

### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

- When the same body integrated unit is reinstalled in the same vehicle, it is not necessary to register the immobilizer again.

- Make sure that there are no differences from the contents of the current settings after installation. <Ref. to LAN(diag)-18, CONFIRMATION OF CURRENT SETTING, OPERATION, Subaru Select Monitor.>