


### 6. Front Outer Handle

#### A: REMOVAL

- 1) Raise the front door glass to the top position.
- 2) Remove the door trim. <Ref. to EI-35, REMOVAL, Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-18, REMOVAL, Front Sealing Cover.>
- 4) Remove the plug at the rear end of the door panel.
- 5) Remove the rod clamp.
- 6) Loosen the bolt (1) and turn bolt (2) five times.
- 7) Move the front outer handle forward, and detach the front outer handle.

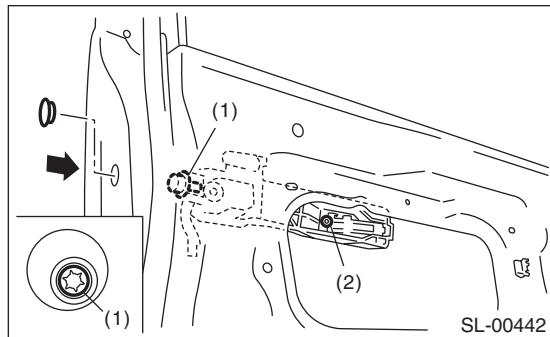

#### CAUTION:

**Do not apply excessive force to remove the handle from door panel, not to deform the door panel.**

- 8) Remove the outer side spacer, and slide the frame assembly forward from the inner side, then remove.

#### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Make sure that the outer handle works correctly after installation.

#### C: INSPECTION

- 1) Make sure that the key cylinder and latch are contacting securely.
- 2) Check the rod for deformation.
- 3) Check the lever and rod for smooth operation.