



### Checking manual transmission oil

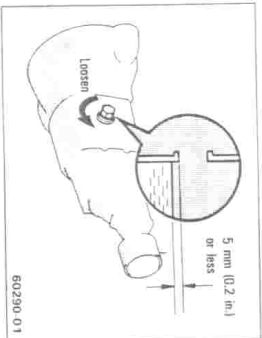

Remove the filler plug and feel inside the hole with your finger. The oil level should be no more than 5 mm (0.2 in.) below the bottom edge of the hole. If the level is O.K., reinstall the plug and tighten it.

- Make sure the vehicle is level while making this check.
- After installing the plug, visually check the transmission case for leaks or damage.


### Checking front differential oil

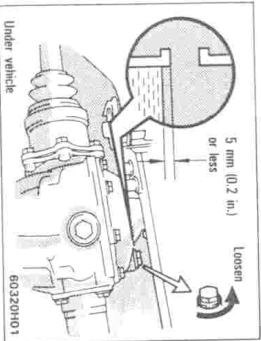

Remove the filler plug and feel inside the hole with your finger. The oil level should be no more than 5 mm (0.2 in.) below the bottom edge of the hole. If the level is O.K., reinstall the plug and tighten it.

- Make sure the vehicle is parked on a level spot.
- After installing the plug, visually check the differential and axle for leaks or damage.

### Checking transfer oil (vehicles with manual transmission)

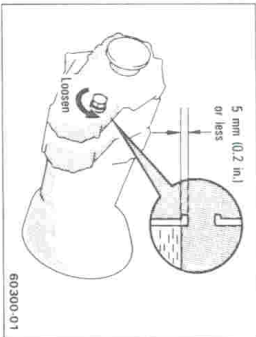

Remove the filler plug and feel inside the hole with your finger. The oil level should be no more than 5 mm (0.2 in.) below the bottom edge of the hole. If the level is O.K., reinstall the plug and tighten it.

- Make sure the vehicle is level while making this check.
- After installing the plug, visually check the transfer case for leaks or damage.

If the level is low, add the oil specified below until it begins to run out of the filler hole. Reinstall the plug.


Oil type:  
Standard differential  
Hypoid gear oil API GL-5  
A.D.D.  
Toyota "GEAR OIL SUPER" oil or hypoid gear oil API GL-5

Recommended oil viscosity:  
Standard differential  
Above -18°C (0°F)  
SAE 90

Below -18°C (0°F)  
SAE 80W or 80W-90  
A.D.D.  
SAE 75W-90

- Fill the lubricant filler with gear oil.
- Put the end of the tube into the filler hole and add oil until it begins to run out.
- Install and retighten the filler plug.

### Checking rear differential oil

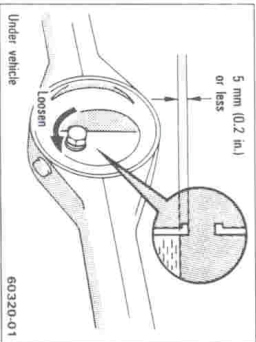

Remove the filler plug and feel inside the hole with your finger. The oil level should be no more than 5 mm (0.2 in.) below the bottom edge of the hole. If the level is O.K., reinstall the plug and tighten it.

- Make sure the vehicle is parked on a level spot.
- After installing the plug, visually check the differential and axle for leaks or damage.

If the level is low, add the oil specified below until it begins to run out of the filler hole. Reinstall the plug.

Oil type:  
Hypoid gear oil for limited-slip differential API GL-5

Recommended oil viscosity:  
Above -18°C (0°F)  
SAE 90

Below -18°C (0°F)  
SAE 80W or 80W-90

- Fill the lubricant filler with gear oil.
- Put the end of the tube into the filler hole and add oil until it begins to run out.
- Install and retighten the filler plug.