


# NOTICE

## Lubricating Propeller Shafts



### Maintenance Interval

Normal Condition	10,000km/6Months
Severe Condition	5,000km/3Months
1) Pulling trailer	
2) Driving on rough, muddy or dusty road.	
Flooded Condition	Daily
Driving in flooded area	

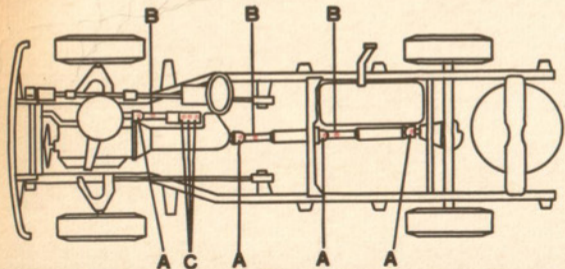

## Propeller Shaft

Q

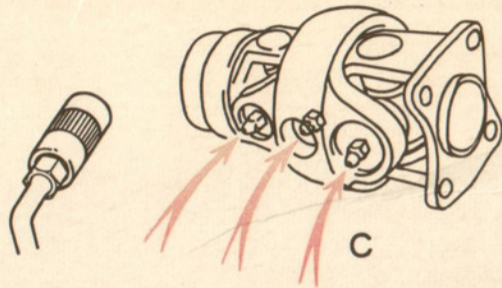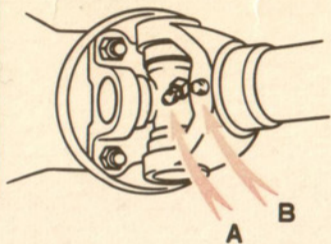

- A. Propeller shaft spiders
- B. Propeller shaft sliding yokes
- C. Front propeller shaft double cardan joint

Grease gun : Diameter 18 mm or less