



# HOW TO USE THIS MANUAL

Each repair method description provided in Section RE of this manual comprises two pages, divided into 2 blocks (REMOVAL AND INSTALLATION) and includes illustrations to facilitate body repair.

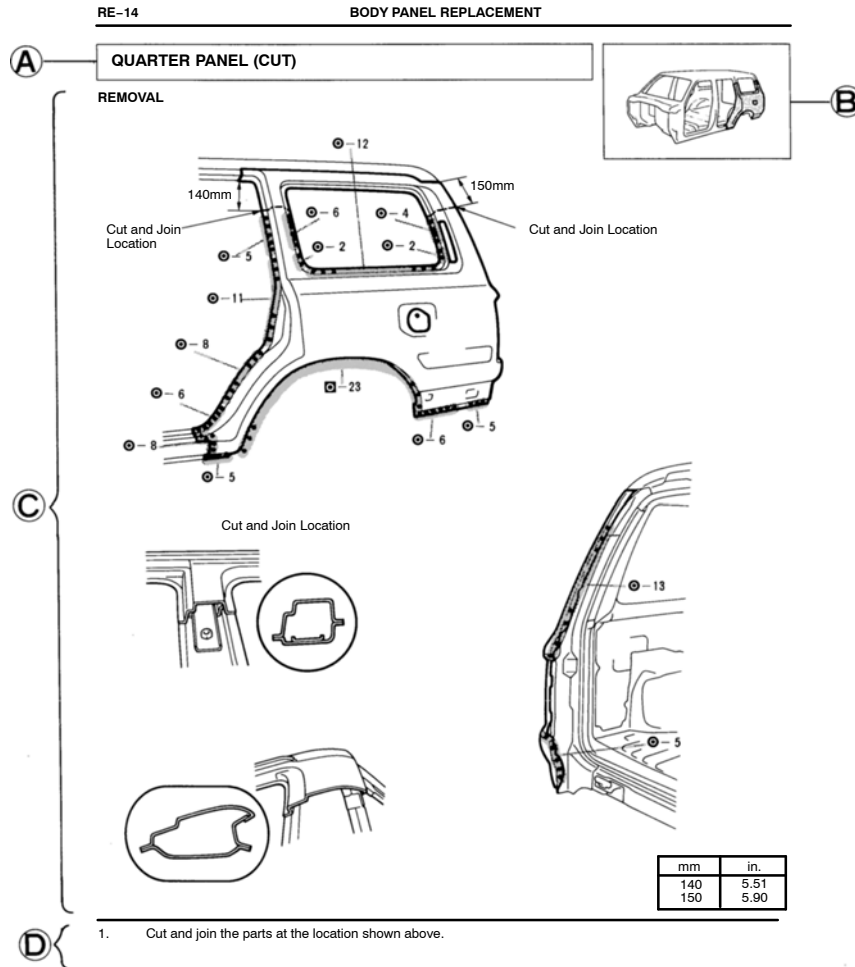

**A** : REPLACEMENT PARTS AND METHOD

**QUARTER PANEL (CUT)**

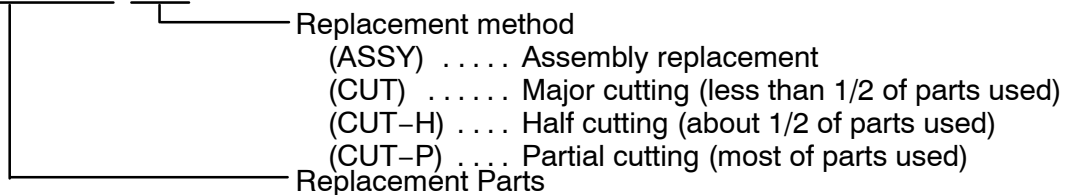


**B** : PARTS LOCATION

**C** : REMOVAL DIAGRAM

Describes in detail removal of the damaged parts involving repair by cutting.

**D** : REMOVAL GUIDE

Provides additional information to more efficiently help you perform the removal.

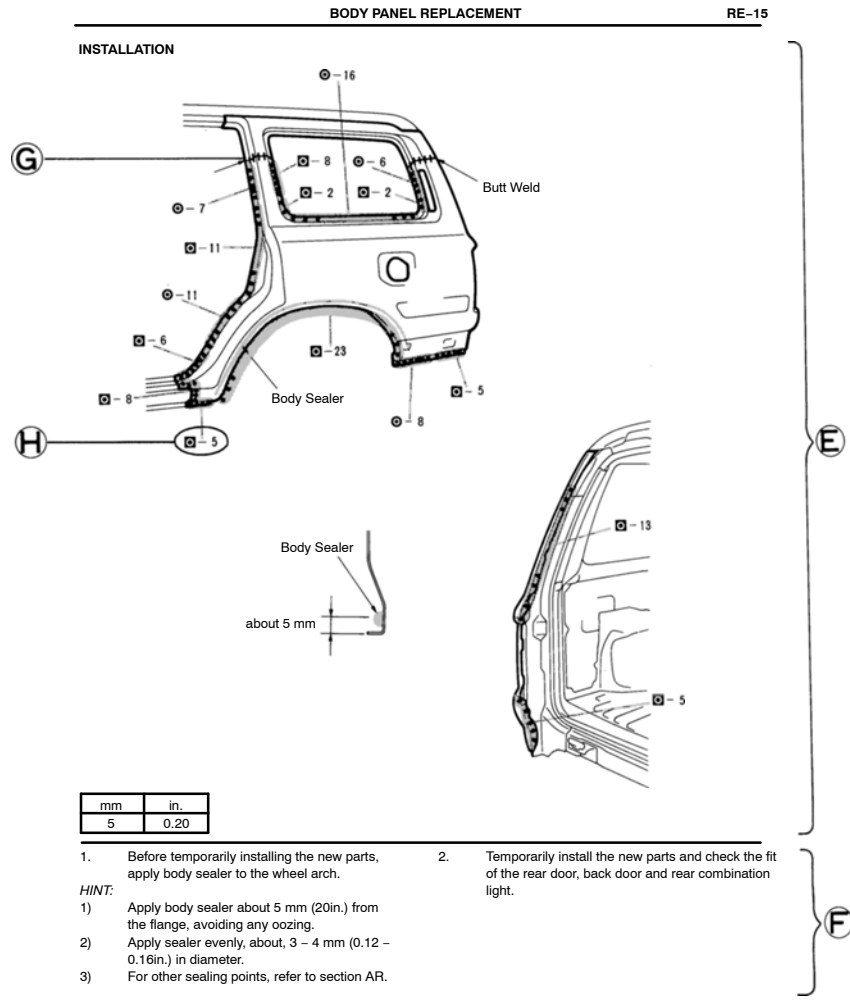

- E** : **INSTALLATION DIAGRAM**  
Describes in detail installation of the new parts involving repair by welding and/or cutting, but excluding painting.
- F** : **INSTALLATION GUIDE**  
Provides additional information to more efficiently help you perform the installation.
- G** : **SYMBOLS**  
See page [IN-4](#).
- H** : **ILLUSTRATION OF WELD POINTS**  
Weld method and panel position symbols.  
See page [IN-5](#).