


4WD

FROM POWER SOURCE SYSTEM (SEE PAGE 40)

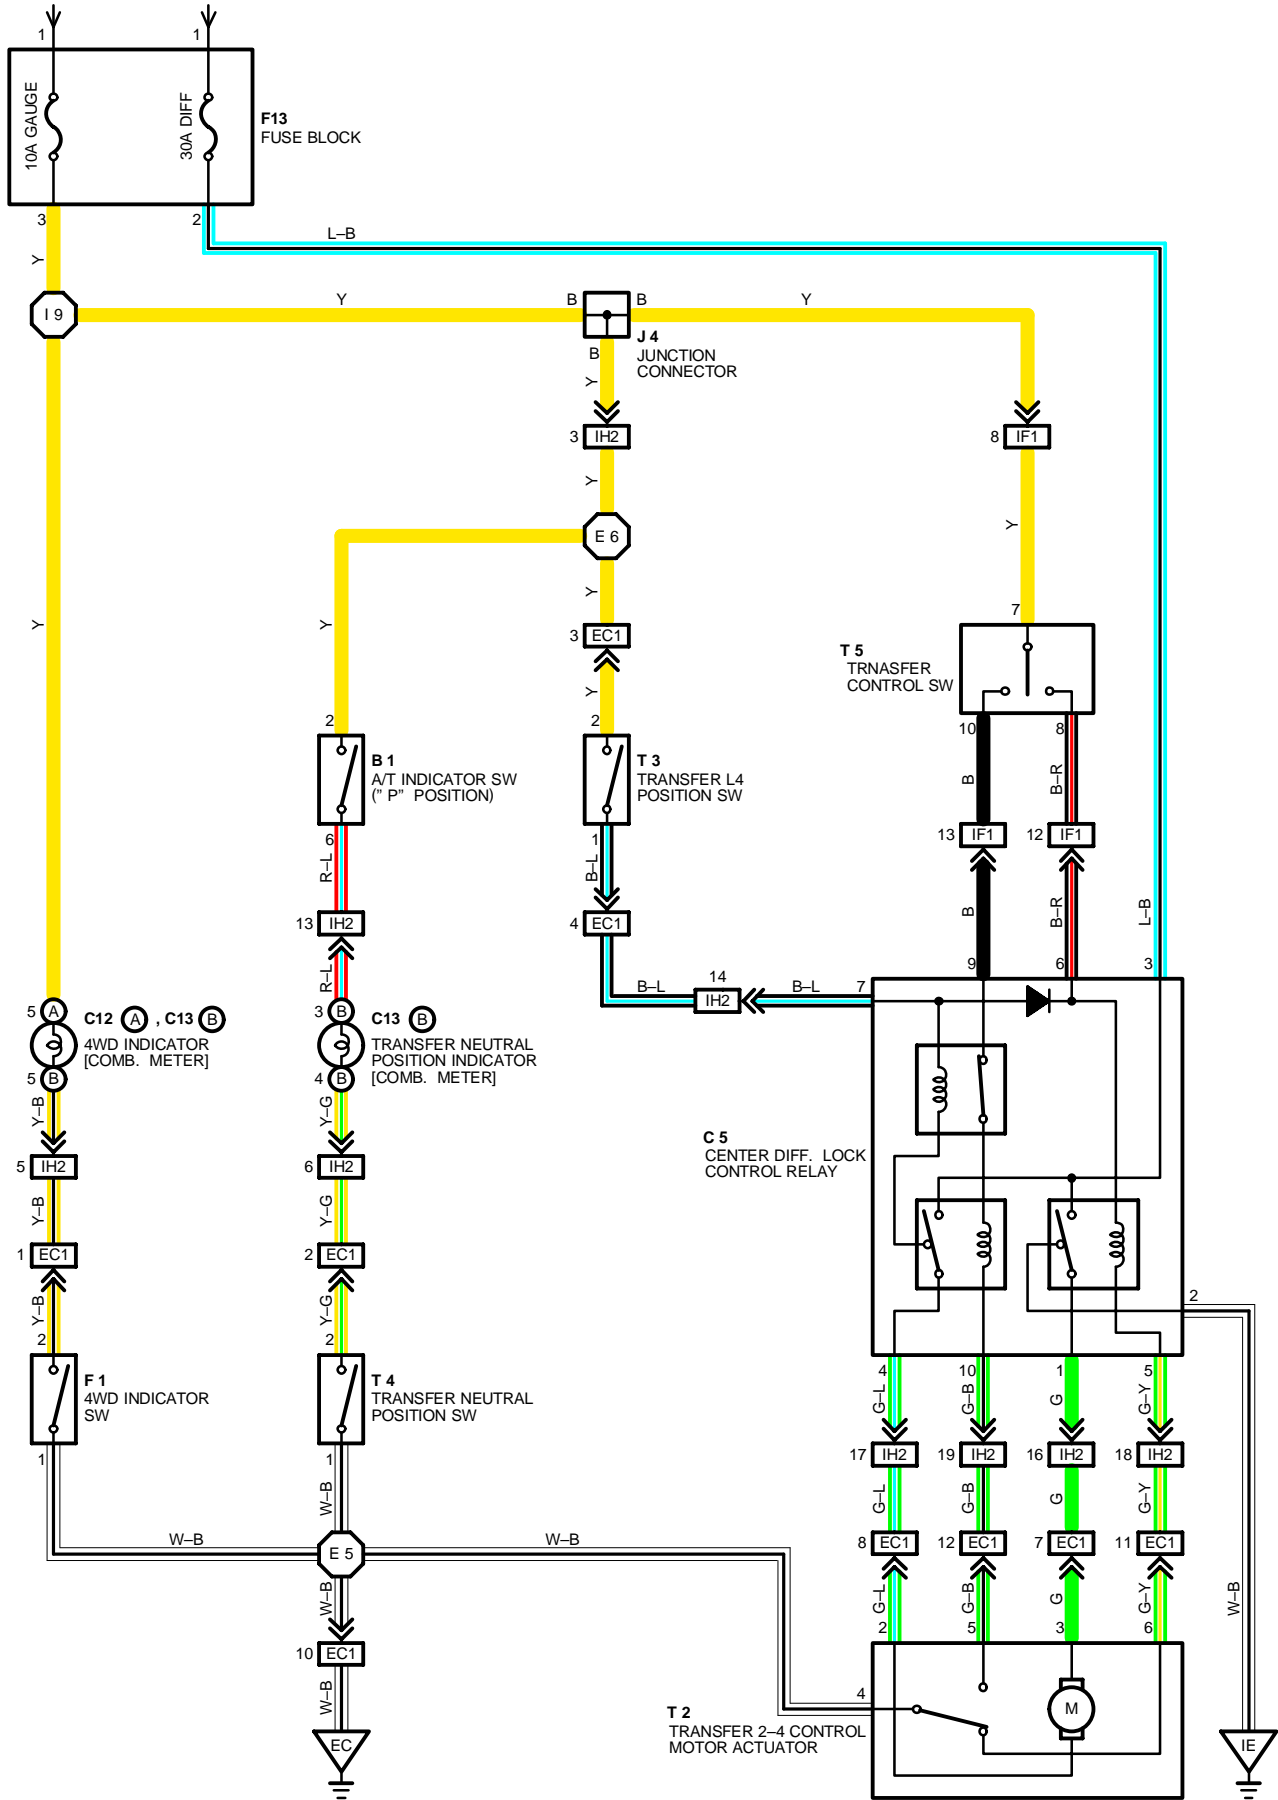

SERVICE HINTS

C 5 CENTER DIFF. LOCK CONTROL RELAY

3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION
 2-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 1	19	F 1	19	T 3	19
C 5	20	F13	20	T 4	19
C12	A 20	J 4	20	T 5	20
C13	B 20	T 2	19		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EC1	22	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
IF1	24	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL CENTER)
IH2	24	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	22	AIR INTAKE CHAMBER
IE	24	RIGHT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 5	22	TRANSMISSION WIRE	I 9	24	COWL WIRE
E 6	22	ENGINE WIRE			


B 1

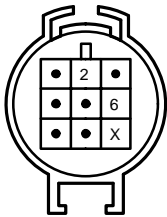


C 5

 

C12 (A) BROWN

 

C13 (B) BLUE

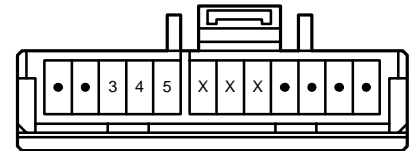


F 1



F13


(SEE PAGE 18)

 J 4 ORANGE



(HINT : SEE PAGE 7)

T 2

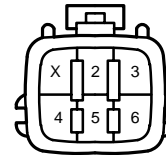

T 3



T 4 GRAY



T 5

