

ABBREVIATIONS

The following abbreviations are used in this manual.

A/C	=	Air Conditioner
A/T	=	Automatic Transmission
COMB.	=	Combination
ECU	=	Electronic Control Unit
EFI	=	Electronic Fuel Injection
EGR	=	Exhaust Gas Recirculation
EX.	=	Except
FL	=	Fusible Link
ISC	=	Idle Speed Control
O/D	=	Overdrive
R/B	=	Relay Block
SW	=	Switch
TEMP.	=	Temperature
VSV	=	Vacuum Switching Valve
W/	=	With
W/O	=	Without

- * The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.