
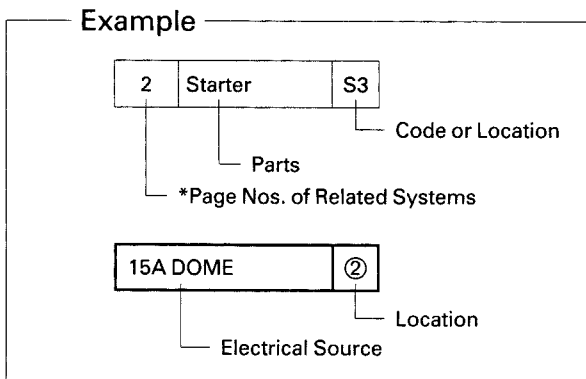


POWER SOURCE (Current Flow Chart)


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

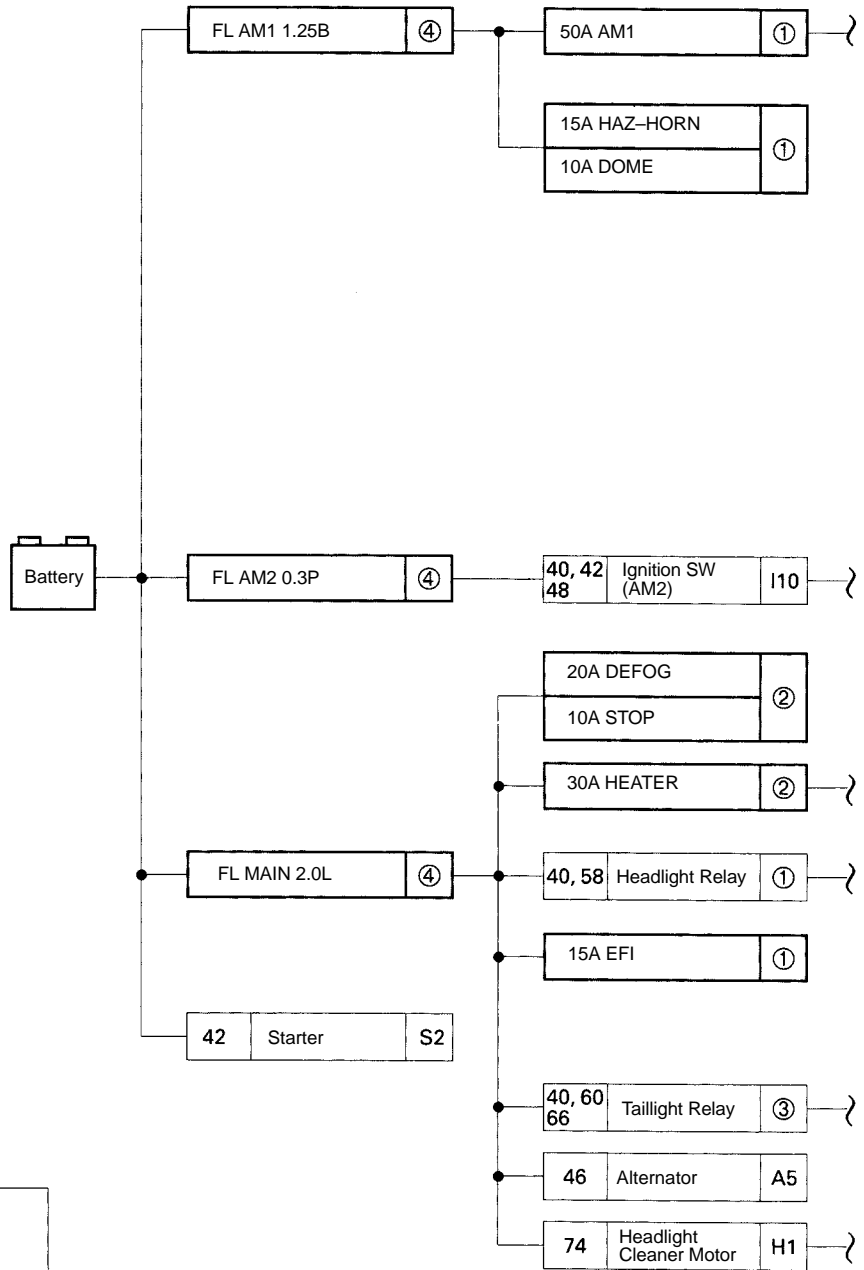

* These are the page numbers of the first page on which the related system is shown. The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 16) (2) : Fuse Block (See page 18) (3) : R/B No. 1 (See page 18)

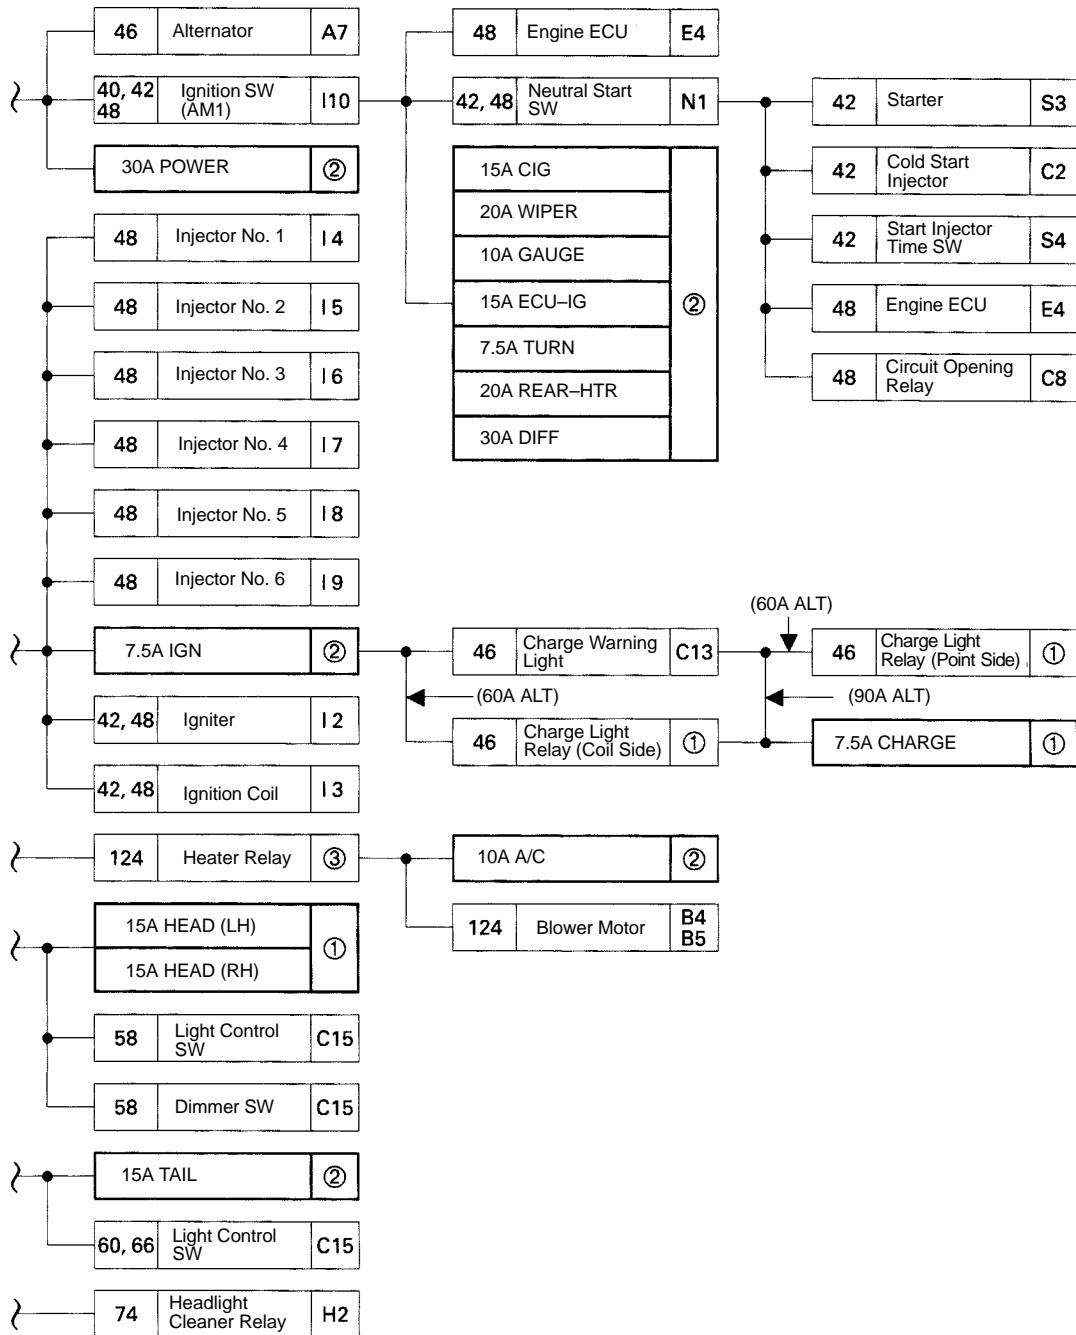

(4) : Fusible Link (F8, F9, F10 See on page19)

POWER SOURCE (Current Flow Chart)

Location	*Page Nos. of Related Systems		124	116	48	46	110	124	66	66 110	66	100 108	64	116	124			70	48	122	108	99	66	
	Parts		A/C Pressure SW	A/T Fluid Temp. Sensor	Air Flow Meter	Alternator	Auto Antenna Control Motor	A/C Amplifier	Ashtray	Auto Antenna Control SW	A/T Shift Lever Illumination	A/T Indicator SW	Back-Up Light SW	Brake Fluid Level SW	Blower High Relay	Blower Motor (for A/C)	Blower Motor (for Heater)	Blower Resistor	Back Door Courtesy SW	Check Connector	Cooling Fan Motor (for Engine Compartment)	Center Diff. Lock Control Relay	Cigarette Lighter	Cigarette Lighter Illumination
	Code or Location		A2	A3	A4	A6	A7	A8	A11	A12	A13	B1	B2	B3	B4	B5	B6	B7	C1	C3	C5	C6	C7	
CB or Fuse																								
①	7.5A	CHARGE				●																		
	15A	EFI			●															●				
	15A	HEAD (LH)																						
	15A	HEAD (RH)																						
	15A	HAZ-HORN																						
	10A	DOME																●		●				
②	15A	CIG					●			●													●	
	15A	TAIL						●		●	●												●	
	10A	STOP																						
	20A	DEFOG																						
	20A	WIPER																						
	10A	GAUGE		●								●	●	●								●		
	7.5A	TURN																						
	15A	ECU-IG																						
	20A	REAR-HTR																						
	7.5A	IGN				●																		
	10A	A/C	●					●																
	30A	DIFF																				●		
	30A	HEATER													●	●	●	●						
	30A	POWER																						

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 16) (2) : Fuse Block (See page 18) (3) : R/B No. 1 (See page 18)

POWER SOURCE (Current Flow Chart)

Location	*Page Nos. of Related Systems		70	92	48	108	60	72	76	70	48	116	66	74	58									
	Parts		Door Courtesy SW Rear RH	Door Lock Control Relay	Engine ECU	4WD Indicator SW	Front Clearance Light LH	Front Clearance Light RH	Front Turn Signal Light LH	Front Turn Signal Light RH	Front Washer Motor	Front Wiper Control Motor	Front Interior Light (w/ Moon Roof)	Front Interior Light (w/o Moon Roof)	Fuel Pump	Fuel Sender	Glove Box Light	Glove Box Light SW	Headlight Cleaner Relay	Headlight No. 1 LH	Headlight No. 1 RH	Headlight No. 2 LH	Headlight No. 2 RH	
	Code or Location		CB or Fuse	D8	D11	E4	E6	F1	F2	F3	F4	F5	F6	F7	F16	F17	F18	G1	G2	H2	H3	H4	H5	H6
①	7.5A	CHARGE																						
	15A	EFI			●	●										●								
	15A	HEAD (LH)																			●		●	
	15A	HEAD (RH)																				●		●
	15A	HAZ-HORN								●	●													●
	10A	DOME	●												●	●								
②	15A	CIG																						
	15A	TAIL					●	●										●	●					
	10A	STOP				●																		
	20A	DEFOG																						
	20A	WIPER										●	●								●			
	10A	GAUGE				●	●											●						
	7.5A	TURN								●	●													
	15A	ECU-IG																						
	20A	REAR-HTR																						
	7.5A	IGN				●																		
	10A	A/C																						
	30A	DIFF																						
	30A	HEATER																						
	30A	POWER		●																				

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 16) (2) : Fuse Block (See page 18) (3) : R/B No. 1 (See page 18)

POWER SOURCE (Current Flow Chart)

Location	*Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse															
	66	64	72	62	60	64	72	62	60	124	70	102	78	84	96	104	112	48 62 86 96	86			
	Rheostat	Back-Up Light LH [Rear Comb. Light LH]	Rear Turn Signal Light LH [Rear Comb. Light LH]	Stop Light LH [Rear Comb. Light LH]	Taillight LH [Rear Comb. Light LH]	Back-Up Light RH [Rear Comb. Light RH]	Rear Turn Signal Light RH [Rear Comb. Light RH]	Stop Light RH [Rear Comb. Light RH]	Taillight RH [Rear Comb. Light RH]	Rear Heater	Rear Heater Relay	Rear Interior Light	Rear Window Defogger	Rear Wiper Control Motor	Rear Wiper Control Relay	Remote Control Mirror LH	Remote Control Mirror RH	Speed Sensor	Seat Belt Warning Relay	Stereo Component Amplifier	Stop Light SW	Shift Lock ECU
	R7	R8			R9				R12	R13	R14	R15	R17	R18	R19	R20	S1	S5	S6	S9	S10	
①	7.5A	CHARGE																				
	15A	EFI																				
	15A	HEAD (LH)																				
	15A	HEAD (RH)																				
	15A	HAZ-HORN			●			●														
	10A	DOME										●							●	●		
②	15A	CIG													●	●			●		●	
	15A	TAIL	●				●			●												
	10A	STOP				●			●											●	●	
	20A	DEFOG										●										
	20A	WIPER											●	●								
	10A	GAUGE		●				●											●			
	7.5A	TURN			●			●														
	15A	ECU-IG																●			●	
	20A	REAR-HTR								●	●											
	7.5A	IGN																				
	10A	A/C																				
	30A	DIFF																				
	30A	HEATER																				
	30A	POWER																				

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page 16) (2) : Fuse Block (See page 18) (3) : R/B No. 1 (See page 18)

