


# TURN SIGNAL AND HAZARD WARNING LIGHT

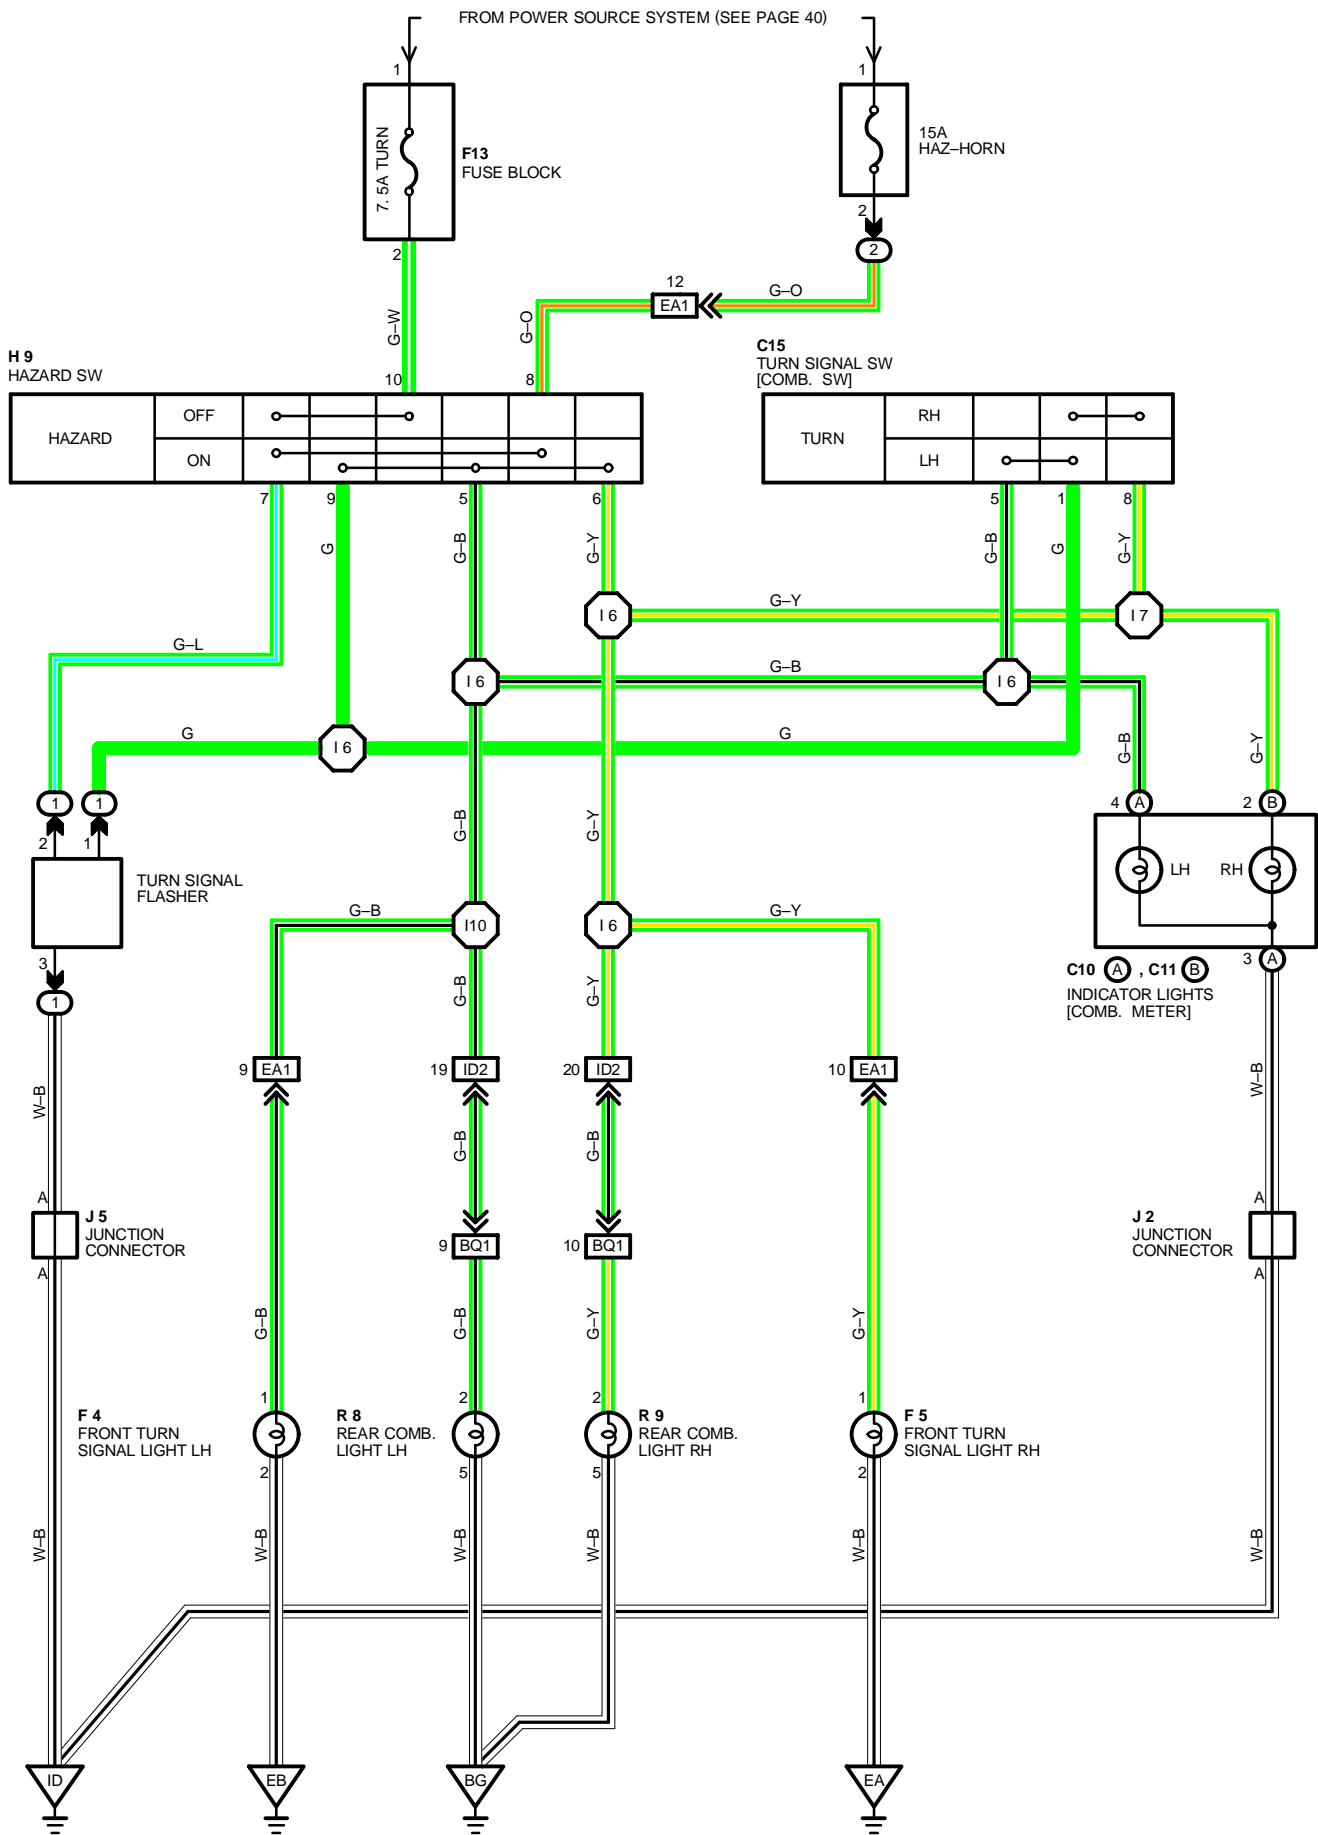

## SERVICE HINTS

### TURN SIGNAL FLASHER

- (1) 2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW ON OR HAZARD SW ON
- (1) 1-GROUND : CHANGES FROM 12 TO 0 VOLTS WITH IGNITION SW ON AND TURN SIGNAL SW LEFT OR RIGHT, OR WITH HAZARD SW ON
- (1) 3-GROUND: ALWAYS CONTINUITY

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE	
C10	A	20	F 5	19	J 5	20
C11	B	20	F13	20	R 8	21
C15	20	H 9	20	R 9	21	
F 4	19	J 2	20			

### ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	18	R/B NO. 1 (LEFT KICK PANEL)
2	16	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	22	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
ID2	24	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
BQ1	26	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)

### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	22	FRONT SIDE OF RIGHT FENDER
EB	22	FRONT SIDE OF LEFT FENDER
ID	24	LEFT KICK PANEL
BG	26	LOWER BACK PANEL CENTER


### ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 6	24	COWL WIRE	I 10	24	COWL WIRE
I 7					


C10 (A) BROWN



C11 (B) GRAY

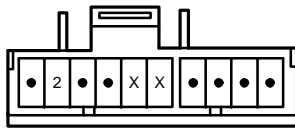

C15 BLACK

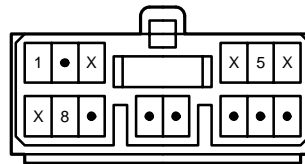


F 4, F 5 GRAY



F13

(SEE PAGE 18)

 H 9



J 2, J 5



R 8, R 9



(HINT : SEE PAGE 7)