
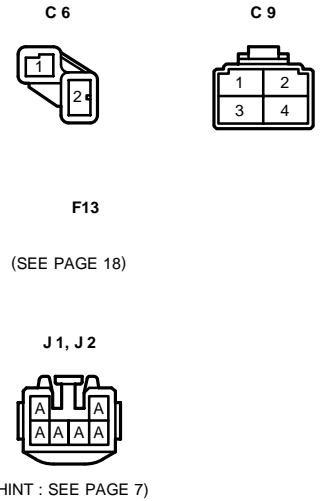


CIGARETTE LIGHTER AND CLOCK

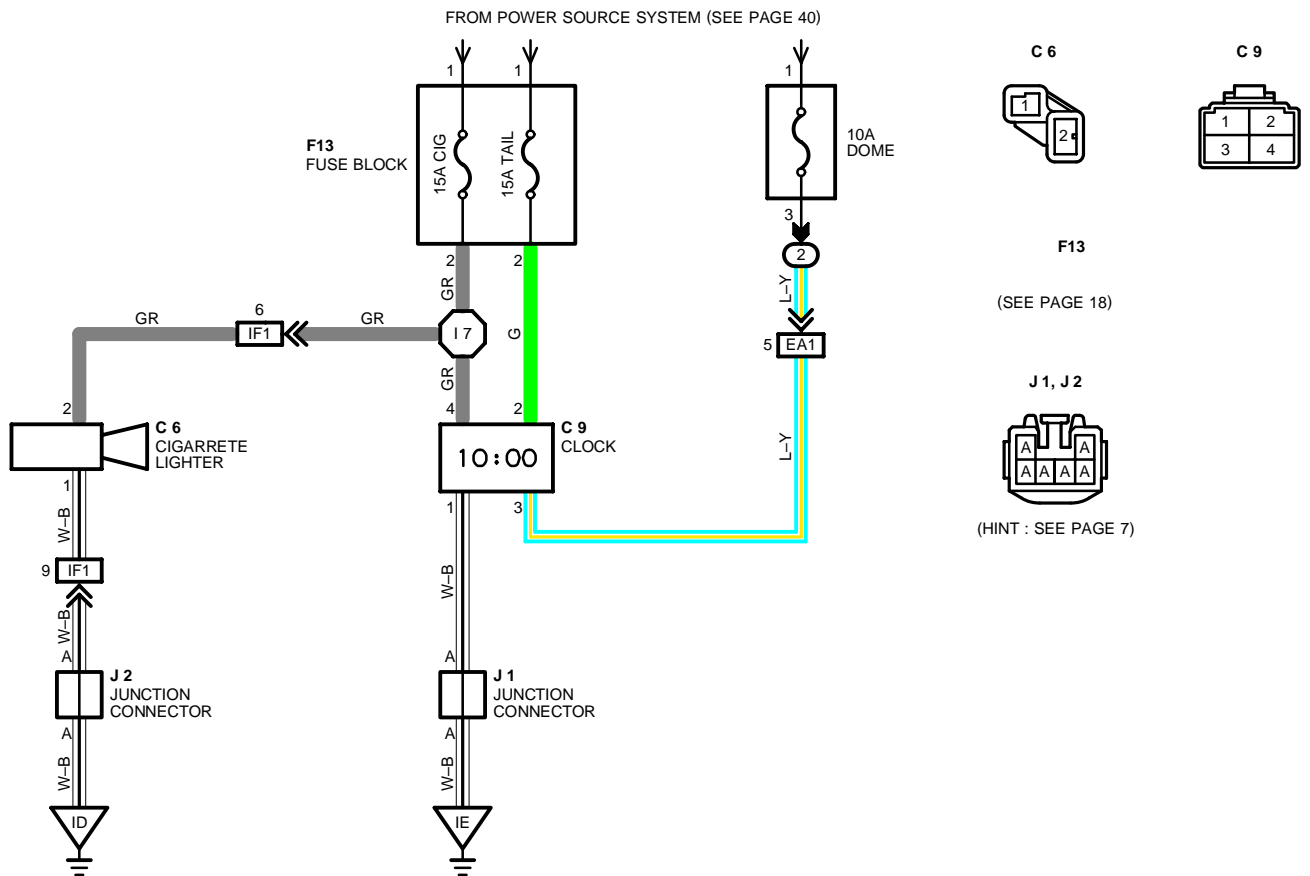

SERVICE HINTS

C 6 CIGARETTE LIGHTER

- 2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION
- 1-GROUND : ALWAYS CONTINUITY

C 9 CLOCK

- 3-GROUND : ALWAYS APPROX. 12 VOLTS (POWER FOR CLOCK)
- 4-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION (POWER FOR INDICATION)
- 2-GROUND : APPROX. 12 VOLTS WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION
- 1-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 6	20	F13	20	J 2	20
C 9	20	J 1	20		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	16	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	22	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
IF1	24	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL CENTER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	24	LEFT KICK PANEL
IE	24	RIGHT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 7	24	COWL WIRE			